11066

1998 - 2010 VOLKSWAGEN BEETLE INCLUDING CONVERTIBLE (Except Turbo) 1999 1/4 - 2006 VOLKSWAGEN GOLF HATCHBACK (Except VR6, R32 & 4-MOTION)

1999 1/4 - 2005 VOLKSWAGEN GTI COUPE


2007 - 2009 VOLKSWAGEN CITY GOLF (CANADIAN ONLY)

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.

\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

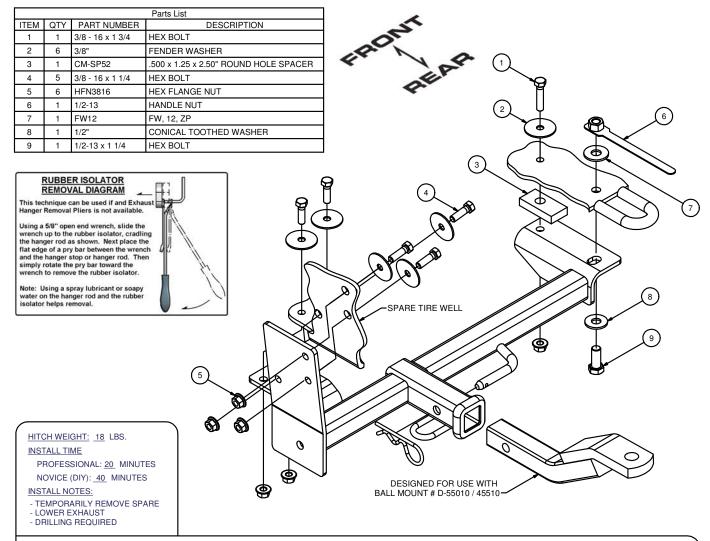

## **INSTALLATION STEPS**

- 1. Temporarily remove spare tire and lower exhaust to ease installation.
- 2. Lift hitch into position, aligning the hole on the passenger side plate with the second hole forward from the tie down loop opening. Using the hitch as a template, drill a 3/8" hole up into trunk. Loosely install long 3/8" bolt, fender washer, spacer, and hex flange nut as shown.
- 3. Use slot in passenger side plate as a template and drill a 1/2" hole into trunk pan. Loosely install 1/2" bolt, conical toothed washer, flat washer and handle nut as shown. Cut handle off handle nut if needed after installation.
- 4. With hitch in position and square on vehicle, use driver side plates as templates and drill remaining (5) 3/8" holes through trunk pan. Install short 3/8" bolts, fender washers and hex flange nuts as shown.
- 5. Torque all 1/2" hardware to 110 lb.-ft. and all 3/8" hardware to 45 lb.-ft. Apply silicone sealer to holes in trunk pan.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

