

11325

## HYUNDAI SONATA GL &amp; GLS

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT &amp; 200 LBS. TONGUE WEIGHT.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.

\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	M10 - 1.25 x 30	HEX BOLT
2	5	3/8"	CONICAL TOOTHED WASHER
3	1	3/8 - 16	HEX NUT
4	1	3/8 - 16 x 1 3/4	CARRIAGE BOLT
5	1	CM-11325-SP	.250" SPACER

## TOOLS REQUIRED

## RATCHET

10mm LONG SOCKET

9/16" SOCKET


11/16" SOCKET

TORQUE WRENCH

PEN / MARKER

AVIATION SHEARS

ROTARY TOOL

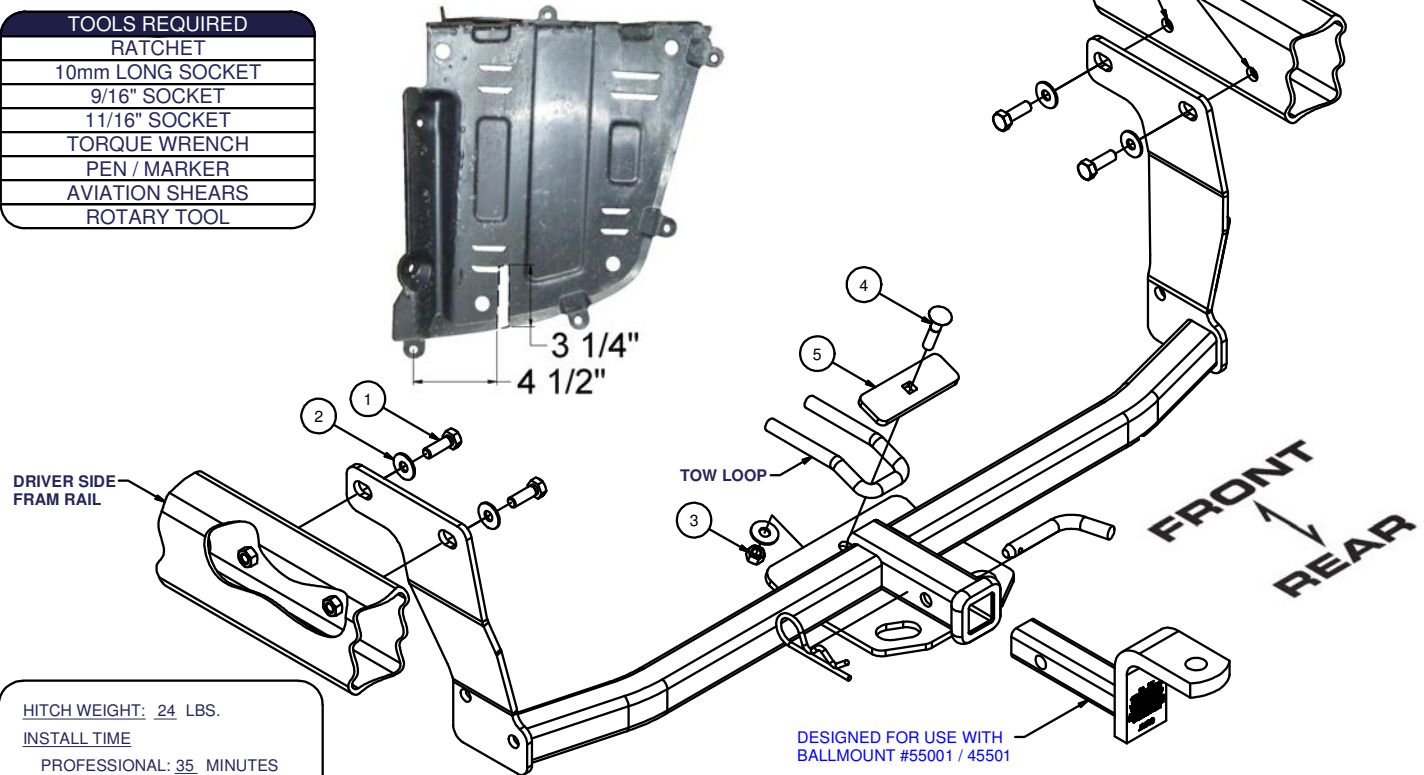

HITCH WEIGHT: 24 LBS.

## INSTALL TIME

PROFESSIONAL: 35 MINUTES

NOVICE (DIY): 70 MINUTES

## INSTALL NOTES:

- NO DRILLING REQUIRED
- MAY REQUIRE FASCIA TRIMMING
- MAY REQUIRE UNDERBODY PANEL TRIMMING

## INSTALLATION STEPS

1. Remove plastic underbody panel (8) fasteners, if needed.
2. Remove the passenger side muffler heat shield by first removing the two rearmost muffler mounts. This will allow access to the four heat shield mounting fasteners and then the forward-most frame weldnut.
3. Place rectangular spacer with 3/8" carriage bolt through tow loop. Raise hitch into position over existing muffler heat shield(s). Notch bumper fascia as needed on drivers side.
4. Install 10mm fasteners on each side into existing weldnuts in the frame rails. Install 3/8" conical toothed washer and 3/8" nut through hitch plate and secure to hitch.
5. Torque all 10mm fasteners to 48 ft-lbs, and all 3/8" fasteners to 45 ft-lbs.
6. Trim and reattach plastic underbody panel as shown, if needed.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**