
13156 / 78141

97-04 INFINITI QX4 SUV 96-04 NISSAN PATHFINDER

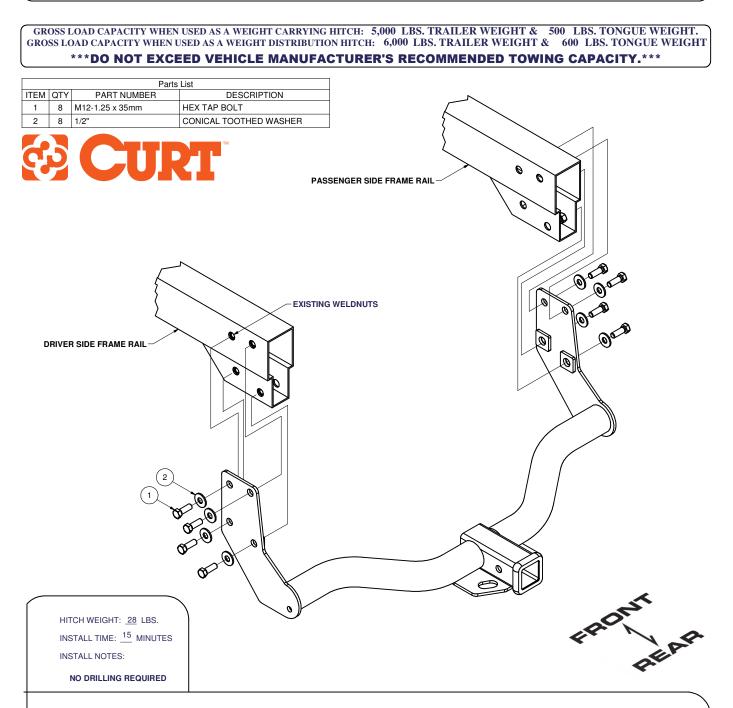

INSTALLATION STEPS

- 1) If present remove tow hooks from vehicle frame (Both sides).
- 2) Raise hitch into position aligning holes in hitch mounting plates with existing weldnuts.
- 3) Insert fasteners as shown and properly torque all fasteners to 86 lb.-ft.

PERIODICALLY CHECK THIS <u>RECEIVER HITCH</u> TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.