
## 2000-04 NISSAN FRONTIER 2DR (SHORT BOX)

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 5,000 LBS. TRAILER WEIGHT & 500 LBS. TONGUE WEIGHT. GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 6,000 LBS. TRAILER WEIGHT & 600 LBS. TONGUE WEIGHT

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

	Parts List				
	ITEM	QTY	PART NUMBER	DESCRIPTION	
	1	6	HFN 1213	HEX FLANGE NUT	
	2	2	CM-13831-BR	.250" BRACKET	
ı	3	6	1/2-13 x 1 3/4	CARRIAGE BOLT	

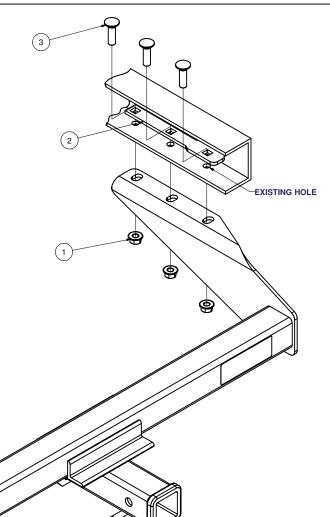



HITCH WEIGHT:  $\underline{39}$  LBS. INSTALL TIME:  $\underline{20}$  MINUTES

INSTALL NOTES:

NO DRILLING REQUIRED

## **INSTALLATION STEPS**

•

1) Raise the hitch into position at end of vehicle frame.

FRAME RAIL

- 2) Install fasteners as shown.
- 3) Torque 1/2" fasteners to 110 lb.-ft.

PERIODICALLY CHECK THIS <u>RECEIVER HITCH</u> TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.