
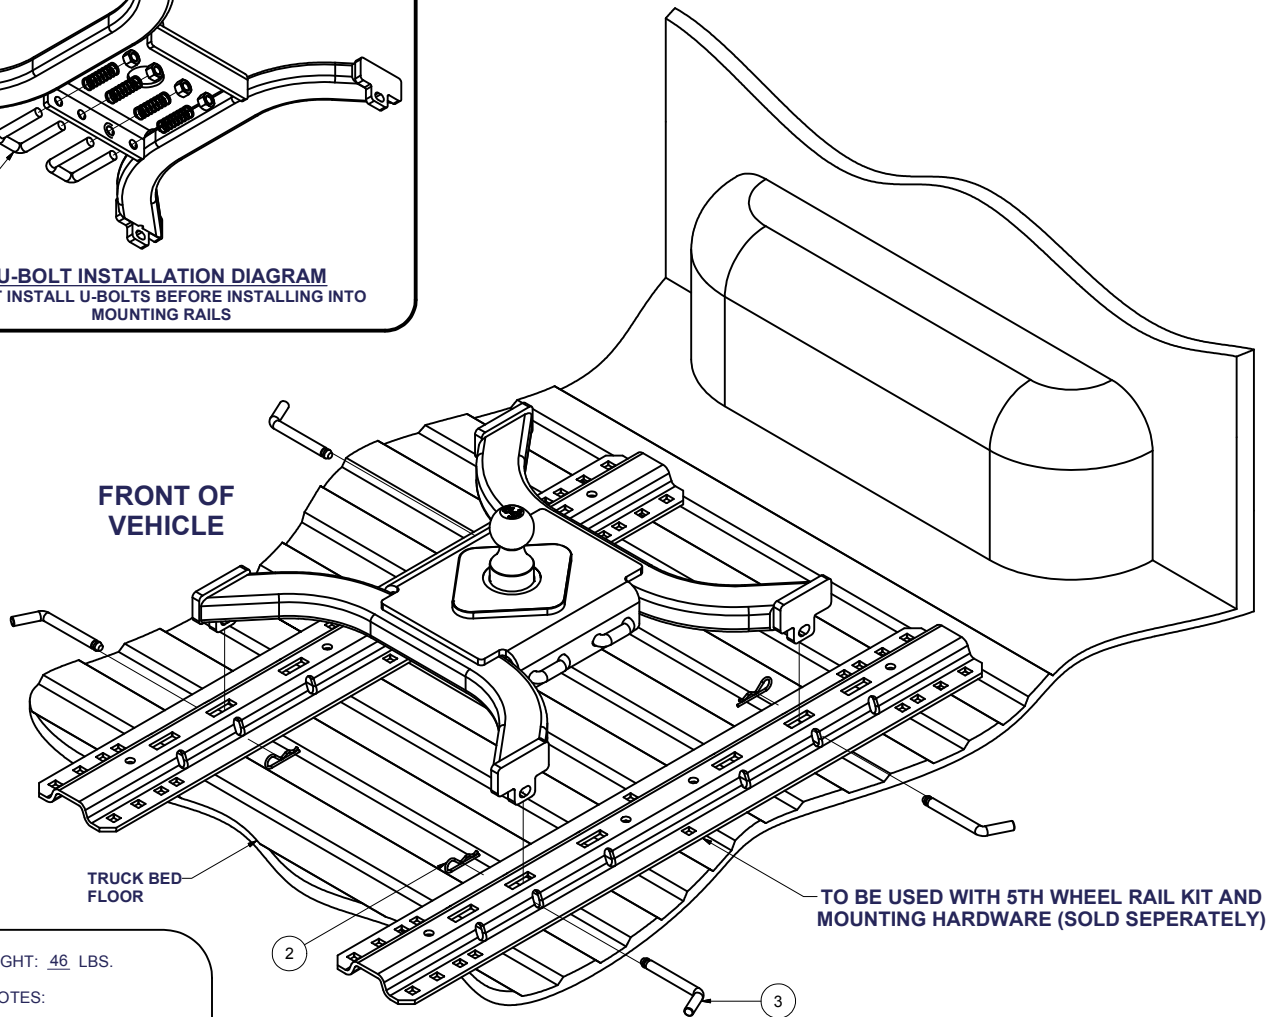


16085

# SPYDER GOOSENECK

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 25,000 LBS. TRAILER WEIGHT & 6,250 LBS. TONGUE WEIGHT.  
**\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\***

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	C-113	SAFETY CHAIN U-BOLT KIT
2	4	CM-16115-RHP	RAIL HAIRPIN
3	4	CM-16115-RMP 1/2" DIA	RAIL MOUNTING PIN

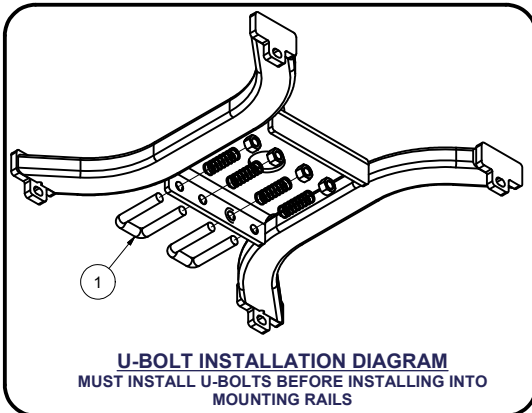

HITCH WEIGHT: 46 LBS.

INSTALL NOTES:

NO DRILLING REQUIRED

## INSTALLATION STEPS

- 1) Before installing hitch, assemble U-bolts into gooseneck hitch as shown.  
(Note: Install nut onto U-bolts just so the first threads start to protrude from the other side of the nut.)
- 2) Place hitch into mounting rails and insert pins. Secure pins by installing rail hairpins as shown.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO INSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Learn more about trailer hitches and towing we have.