



# INSTALLATION INSTRUCTIONS

**DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER**

## 56284 APPLICATIONS

Make	Model
Honda	HR-V

## VEHICLE-TO-TRAILER WIRING HARNESS

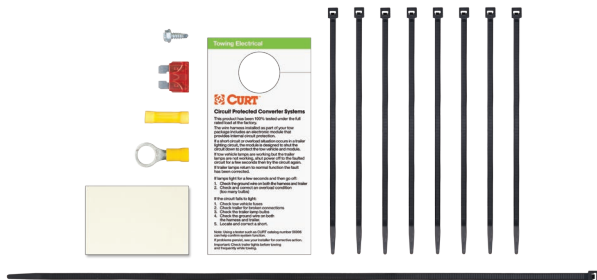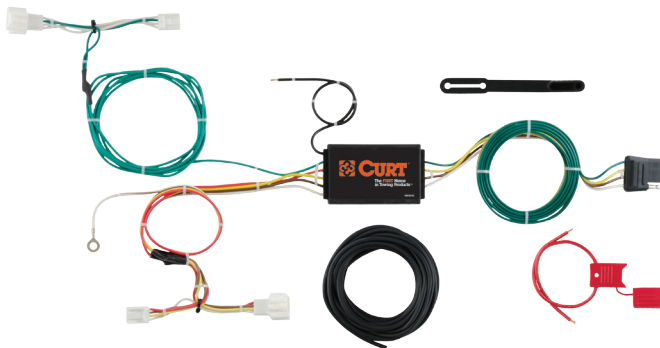

## WIRING LOCATION GUIDE

### SUVS, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

**S3** - Behind driver side rear access panel

**S4** - Behind passenger side rear access panel



## NOTE

All steps must be followed to ensure the CURT wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## TOOLS NEEDED

- |                         |                        |
|-------------------------|------------------------|
| 8mm socket              | Flat blade screwdriver |
| 10mm socket             | Wire stripper          |
| Ratchet                 | Crimping tool          |
| Panel trim removal tool | Cutting tool           |
| Phillips screwdriver    |                        |

## WARNING

The battery connection must be fuse protected, 10 amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

# INSTALLATION

## Step 1

Locate vehicle battery on the driver side under the hood and disconnect the negative battery terminal (A).

## Step 2

Open the vehicle tailgate. Remove the two fasteners securing the trunk floor covering and remove the cover (B,C).

## Step 3

Remove the scuff panel by pulling out on the bottom and then up. Take care not to damage the locking tabs on the back (D).

## Step 4

Starting on the driver side, pull back on the side trim panel to locate the vehicle taillight wiring harness connectors (E). The connectors will be similar to those on the CURT wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs (F).

## Step 5

Insert the CURT wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

**WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

## Step 6

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

## Step 7

Route the CURT wiring harness end with the green wire to the passenger side under the scuff panel. Repeat steps 4 and 5 on the passenger side using the harness end with the green wire.

## Step 8

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape.

## Step 9

Route the black power wire from the vehicle battery as shown on the included CME-PCL-INS sheet.

## Step 10

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties.

## Step 11

Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

