
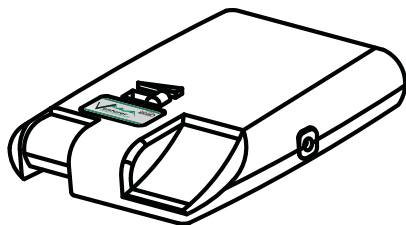


# I-2133

CHRYSLER ASPEN  
DODGE DAKOTA  
DODGE DURANGO  
DODGE RAM  
ELECTRIC BRAKE CONTROL  
ADAPTER HARNESS

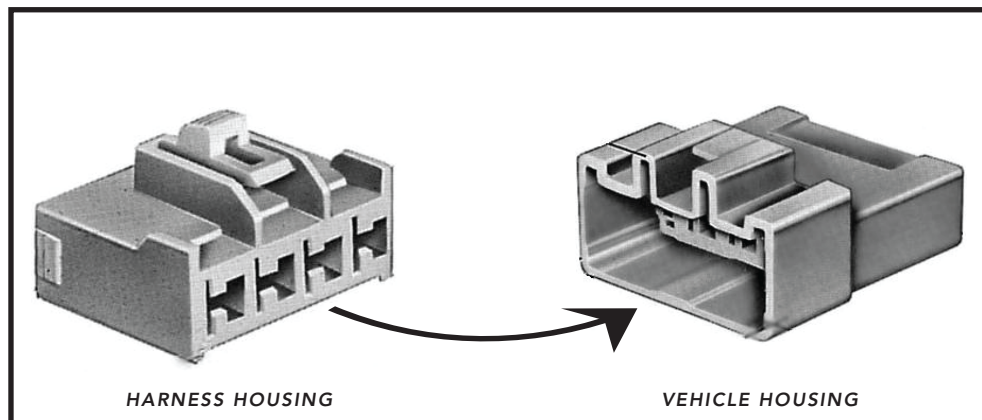

## MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Locate the vehicle's electric brake control harness. The harness will be located underneath and left of the steering column, taped to another harness near the emergency brake pedal. There will be a 4-pin connector that mates with the one on the adapter.
2. Plug the brake control adapter into the vehicle electric controller connector.
3. Plug the remaining connector into your Curt brake controller.
4. Complete the installation per the electric brake control's installation instructions and mount the unit as directed. Perform test procedures as instructed.