


# I-2135

CADILLAC ESCALADE  
CHEVROLET AVALANCHE  
CHEVROLET SILVERADO  
CHEVROLET SUBURBAN  
GMC SIERRA  
GMC YUKON  
CHEVROLET TAHOE  
HUMMER H2

ELECTRIC BRAKE CONTROL  
ADAPTER HARNESS

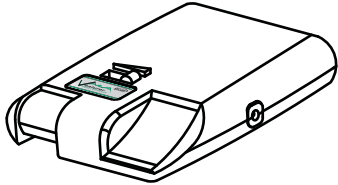

## MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Locate the vehicle's black Electric Junction Box in the interior of the pickup, underneath the dashboard, left of the steering column, just above the carpet. Remove the cover and locate the mating connection point in the Electric Junction Box for electric trailer brakes. This will be located in the top row, second from the left.

2. Plug the Brake Control Adapter into the mating connection in the Electric Junction Box. Verify that there is battery (+) power supplied to the adapter by carefully probing it with a circuit tester (making sure none of the other wires touch).

3. Plug the remaining connector into your Curt brake control.

4. Complete the installation and perform the set up procedure per the Installation and User Guide supplied with the brake control.

### Note:

For vehicles with no power supply to or from the brake control adapter, use an electric brake control wiring kit, such as Curt 51500, connecting and routing wires per the Installation and User Guide supplied with the brake control.

