

55106

HONDA CR-V

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the rear hatch and remove storage area cover, rubber mat & spare tire cover. [A]

2. Using a 10mm socket remove the driver and passenger side D-rings and remove the trunk scuff fascia panel. [B]

3. Using a pry tool carefully pull back the driver side interior trim panel. (A clip removal tool may be required). Start separating the trim panel in the rear of the vehicle and work your way up and forward to expose the mate to the T-connector. [C]

4. Plug the T-connector in to the vehicle's harness connector until they lock into place. Take care not to damage the locking tabs. [D]



5. Route the remaining part of the T-connector behind the trim panel toward the rear of the vehicle. Find a suitable location for the black converter box and mount using the double-sided tape provided. [E]

6. Route the the 4-flat to the spare tire area for storage and reinstall all parts removed.

7. Test the installation with a test light or a properly wired trailer.

WARNING!

Verify miscellaneous items the may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury

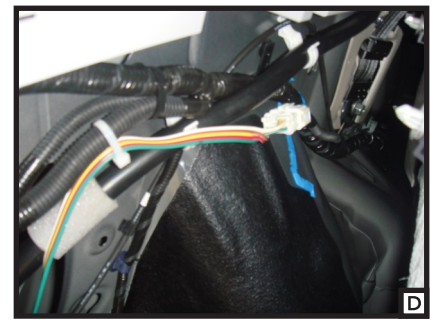



55106