

55124

JEEP WRANGLER

WIRING LOCATION GUIDE



MUST READ FIRST!


All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. On driver's side rear taillight(S1), remove screws securing taillight to vehicle.
2. Separate vehicle's wiring connectors, making sure not to break locking tabs.
3. Place T-connector harness near vehicle's wiring and match male to female connectors and insert. **B** Be sure T-connector is fully inserted and tabs lock in place.
4. Find suitable grounding location near T-connector wiring such as existing bare metal screw and secure white ground wire. If needed, use self-tapping screw provided to secure to vehicle.
5. Reassemble.

WARNING !

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury .



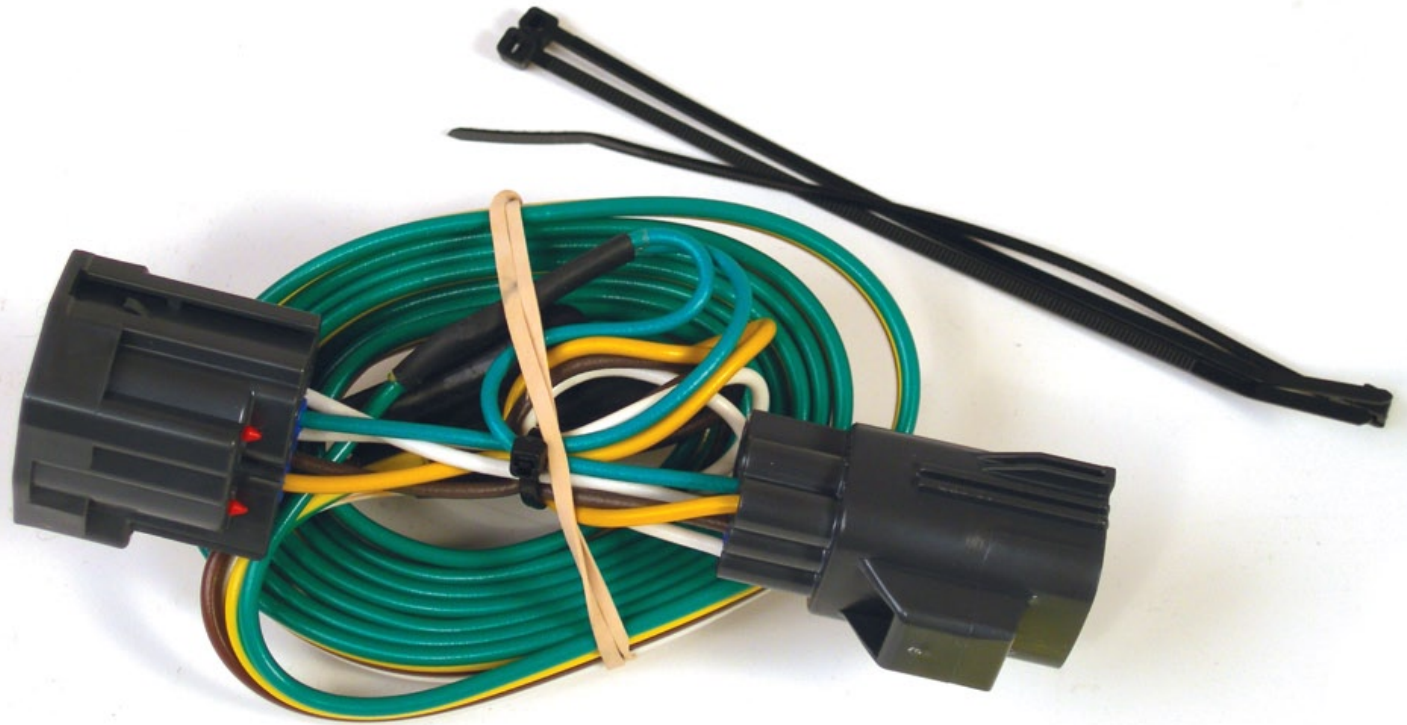

55124