

55241

FORD EXPLORER
FORD RANGER
MAZDA B-SERIES PICKUP
MERCURY MOUNTAINEER

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Locate the vehicles factory tow harness connector it will be located behind the bumper and will have connection points similar to the harness connector. **A** On the Ranger it will be located on the drivers side. **B** On the Explorer it will be located on the passengers side. **C**


2. Remove protective cap **D** and insert harness connector into the vehicles tow harness connector. Make sure the connectors are fully inserted with locking tabs in place.

3. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



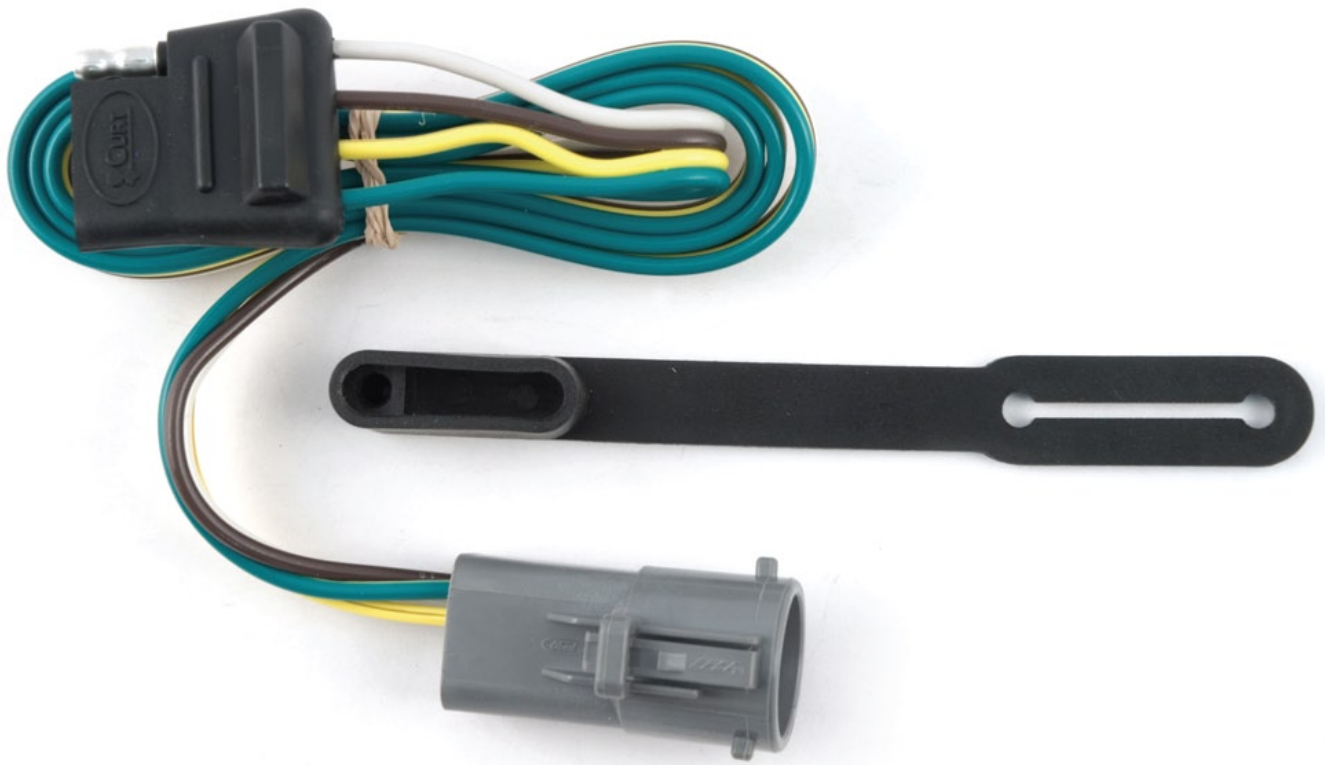

55241