

55245

LEXUS LX 470
LEXUS RX 300
TOYOTA 4RUNNER
TOYOTA HIGHLANDER
TOYOTA LANDCRUISER

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

01/26/09

1. Locate the vehicles factory tow plug location (S6) behind the bumper. On some vehicles the tow plug will be hidden under a black box. remove the 10 mm hex bolts and temporarily remove cover to reveal the tow plug. [A][B]


2. Insert harness connector into vehicle harness. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

3. On the Highlander and RX300 locate the vehicles fuse panel on the drivers side of the engine compartment. Insert a 20 amp fuse in the location marked towing. [C]

4. Re-install anything removed during installation.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

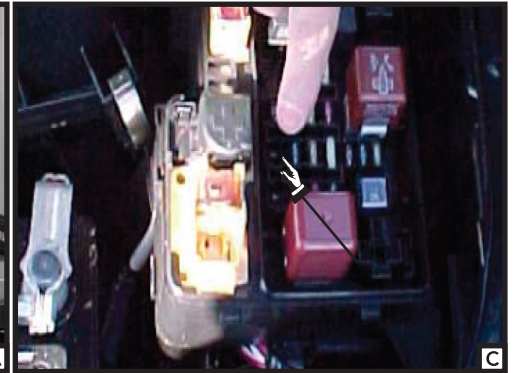



55245