

55246

TOYOTA SEQUOIA

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

03/25/09


1. On the passenger side, behind the bumper, locate the vehicles factory tow harness connector. [A][B] Remove the connectors protective cap being sure not to damage the locking tabs.


2. Insert the tow harness connector into the vehicles connector. Make sure the connectors are fully inserted with locking tabs in place.

3. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location using cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

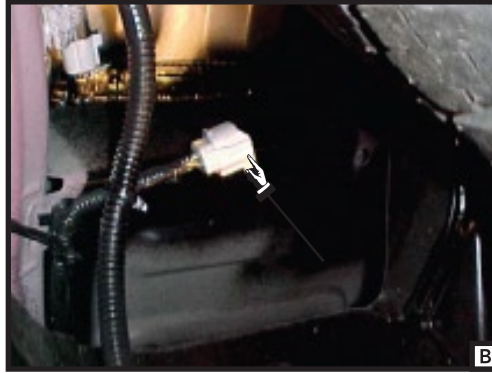

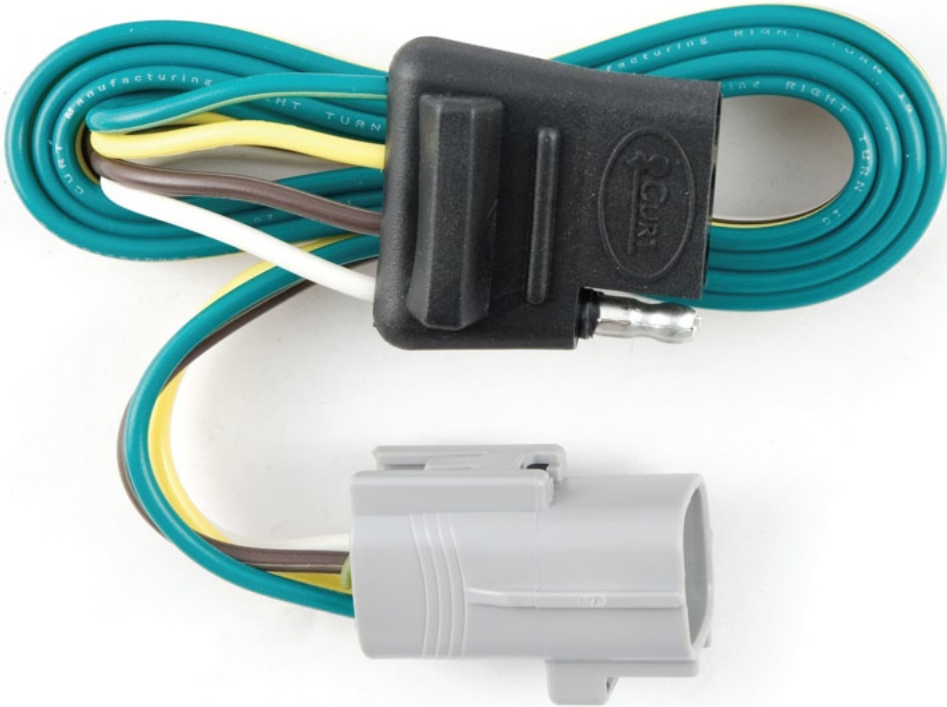

55246