

T-Connector Wiring Kit

INSTALLATION INSTRUCTIONS

1. Read instructions thoroughly before beginning.
2. Prior to installation, test the correct operation of all vehicle lighting by turning on the vehicle's headlamps, tail lights, turn signals and brake lights. After verifying correct operation, turn off all lights before proceeding.

3. Locate the vehicles wiring harness. This factory harness will be located behind the rear bumper near the right (passenger) side frame rail and will contain a connector similar in appearance to that on the T-Connector harness.



4. Remove the protective duct cover from the factory harness connector, if present and clean away any dirt, dust or debris from the connector.

5. Insert the T-Connector harness end into the factory harness connector. Firmly press the ends together until the locking tabs engage.

6. Confirm trailer harness operation with a test light or by using a trailer.


7. Secure the T-Connector wires to the vehicle using the provided cable ties.



#55251

T-Connector Wiring Kit INSTALLATION INSTRUCTIONS

Fits: 2002-03 Ford Explorer w/Tow Package
2002-03 Mercury Mountaineer w/Tow Package

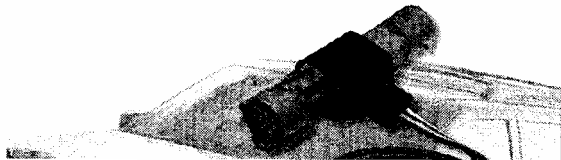

Looking for dependable trailer hitches and towing? Rely on CURT for quality and long-lasting products.