

# 55256

FORD F-150  
FORD F-250

## WIRING LOCATION GUIDE



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

3/30/09

1. Locate the vehicles taillight wiring harness located under the vehicle on the drivers side location T3 behind the bumper. It will have connectors similar to those on the T-connector.

2. Separate the vehicles connectors being sure not to damage the locking tabs. Insert the T-connector in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.


3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



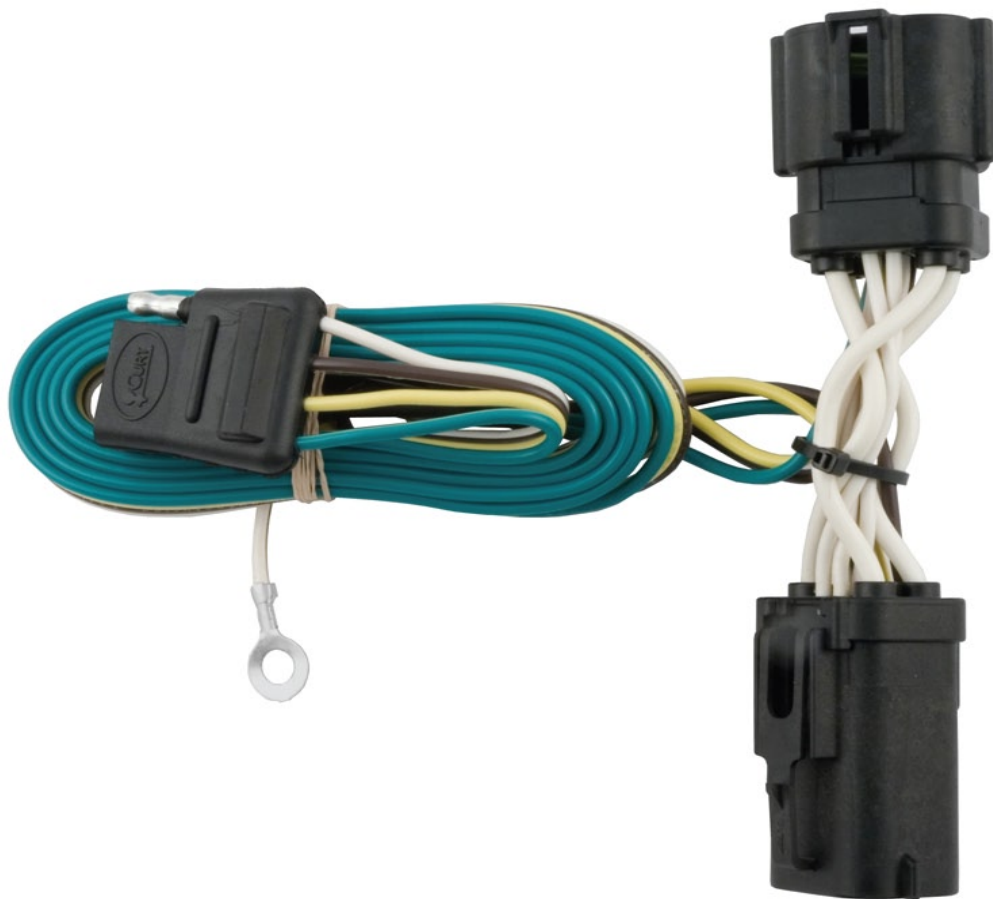

55256