

55312

CHEVROLET BLAZER
CHEVROLET C/K SERIES PICKUP
CHEVROLET S-10 PICKUP
CHEVROLET SUBURBAN
GMC C/K SERIES PICKUP
GMC JIMMY
GMC SONOMA PICKUP

GMC SUBURBAN
GMC SYCLONE
ISUZU HOMBRE

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Locate the vehicles taillight wiring harness location T3 in-between the driver's side frame rail and the spare tire. [A]

2. Separate the vehicles connectors being sure not to damage the locking tabs. [B] Insert the T-connector in-between the separated connectors making sure the connectors are fully inserted with locking tabs in place. [C]


3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.


4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

5. Secure any loose wires with the cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

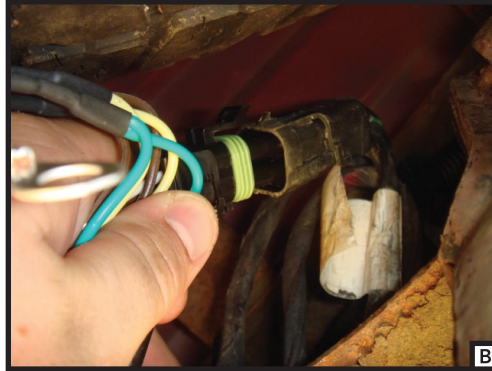

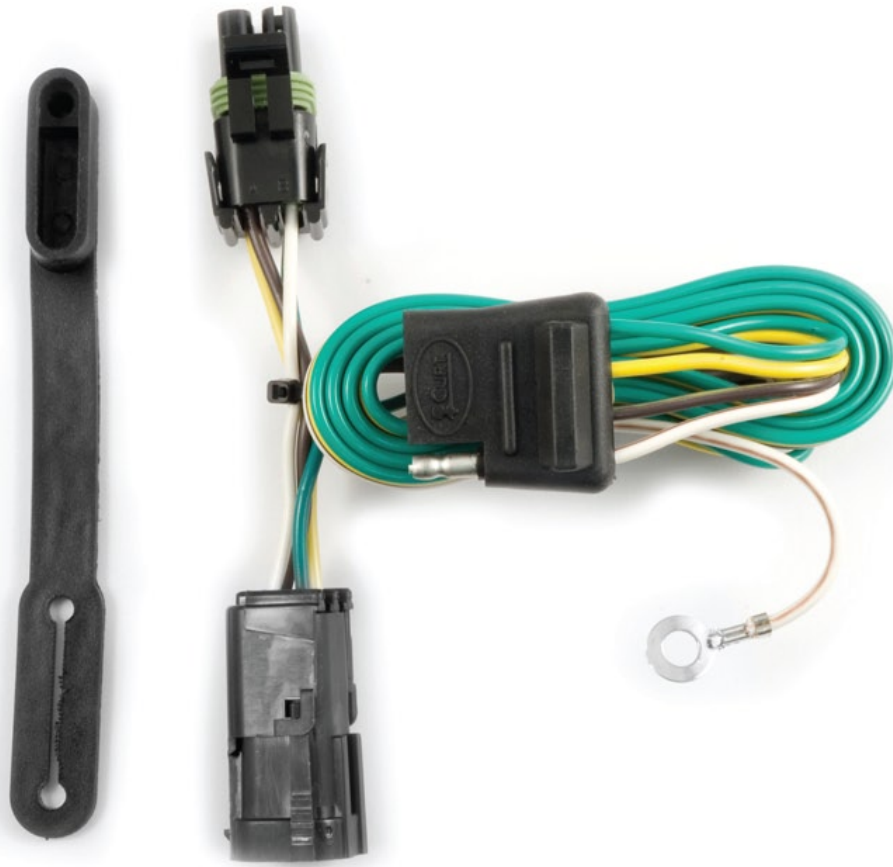

55312