

# 55315

CHEVROLET C/K SERIES PICKUP  
GMC C/K SERIES PICKUP

## WIRING LOCATION GUIDE



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


1. Locate the vehicles factory tow harness (A). It is located under the vehicle in location T4 along to drivers side frame rail (B). It will have connectors similar to those on the T-connector.


2. Disconnect the connectors taking care not to damage the locking tabs. Insert the T-connector end in-between the disconnected connectors making sure the locking tabs are locked into place (C).

**WARNING!**  
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

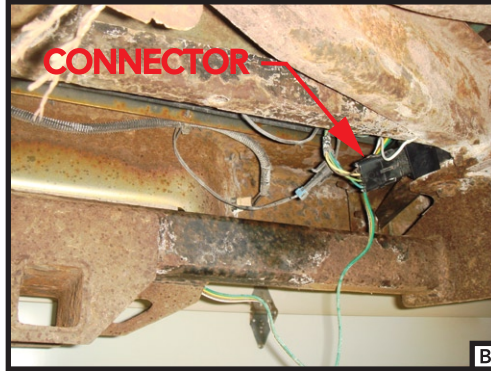

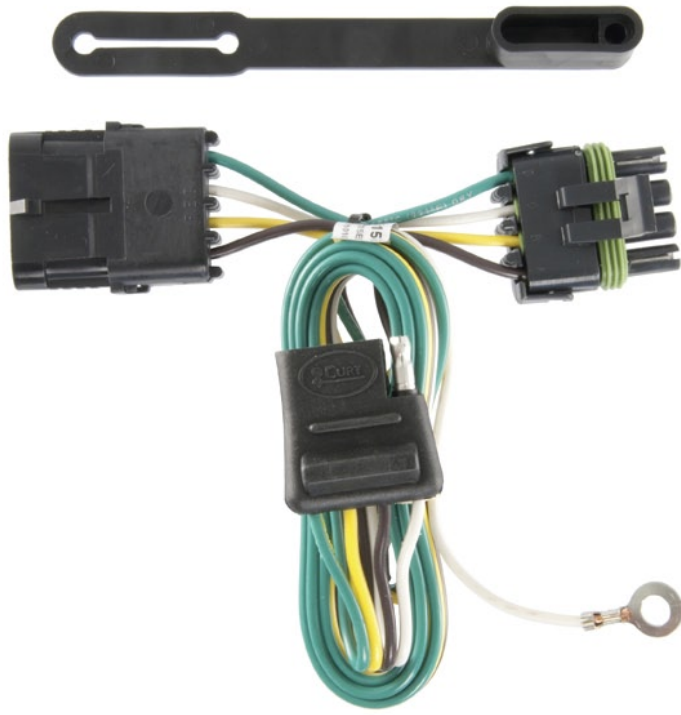

55315