

55316

FORD F-SERIES

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Locate the vehicle's taillight wiring harness along the inside of the left rear frame rail. This harness will have a connection point with connectors matching the ends of the T-connector adapter. **[A]**

2. Lowering of the vehicle's spare tire may ease the installation. **[B]** Separate the harness connectors, being careful not to break the locking tabs. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary. **[C]**

3. Insert the T-connector adapter between the harness connectors and lock into place. Be sure that the connectors are fully inserted with locking tabs in place. **[D]**


4. Route the T-connector harness to the center of the vehicle and secure wire to vehicle cross member or other mounting points using the cable ties provided.

5. Test the installation with a test light or trailer.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.



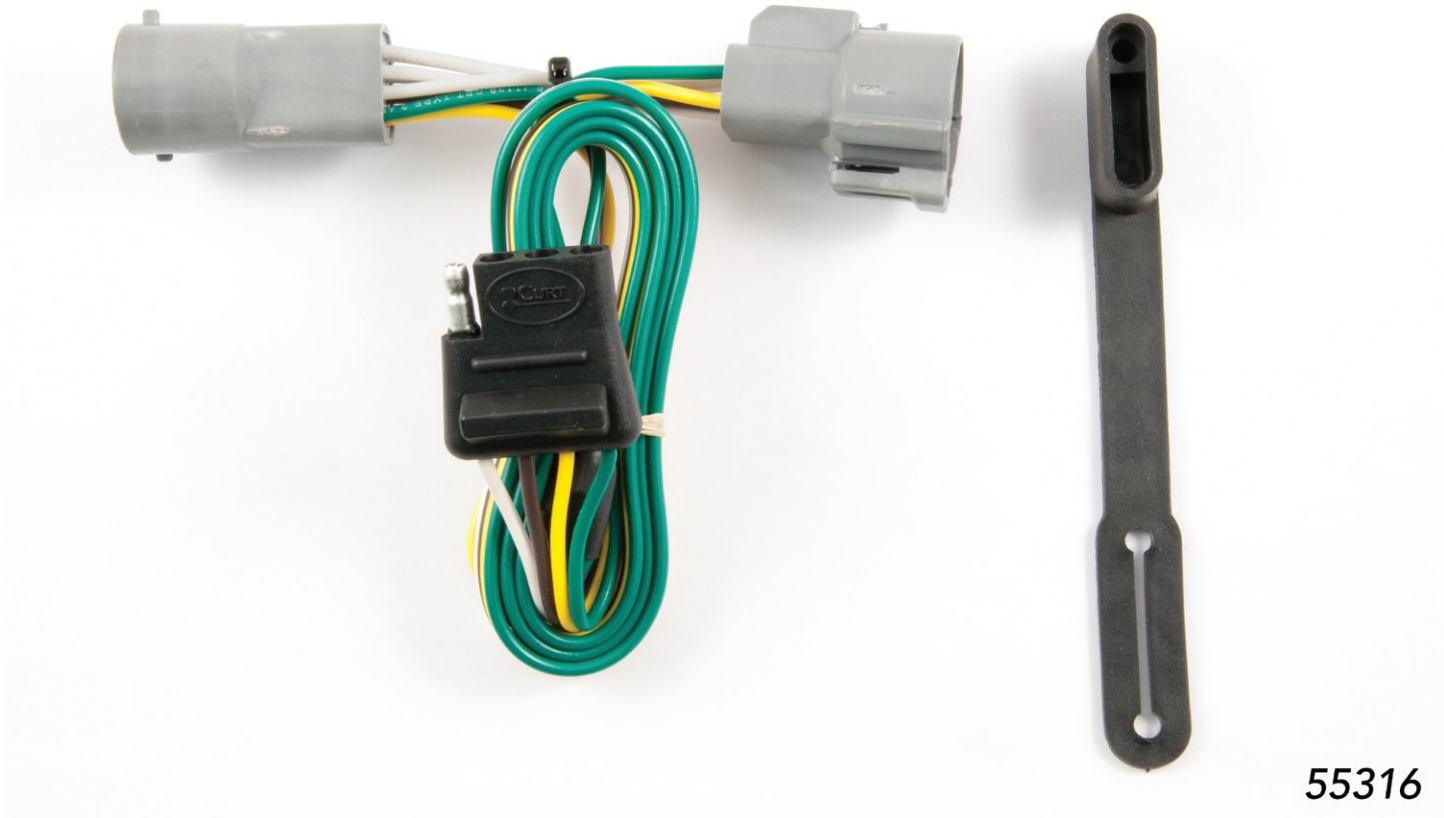

55316