

# 55329

DODGE DAKOTA  
DODGE RAM 1500  
DODGE RAM 2500/3500

## WIRING LOCATION GUIDE




### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Locate the vehicle's taillight wiring harness at the rear of the vehicle near the outside of the vehicle frame on both sides of the vehicle (T3 & T5).
2. Separate the housings on the driver's side being careful not to damage the locking tabs. **A** Clean the mating surfaces of the connectors if necessary.
3. Insert the T-connector with the yellow wire between the housings and lock into place. **B** Be sure the housings are fully inserted with locking tabs in place.
4. Route green wire to passenger side of vehicle and repeat steps 2 and 3.
5. Route the 4-flat to the center of the vehicle and secure wires using cable ties provided.

**WARNING!**  
Verify miscellaneous items that may be hidden behind or under any surfaces before drilling to avoid damage to vehicle and/or personal injury.



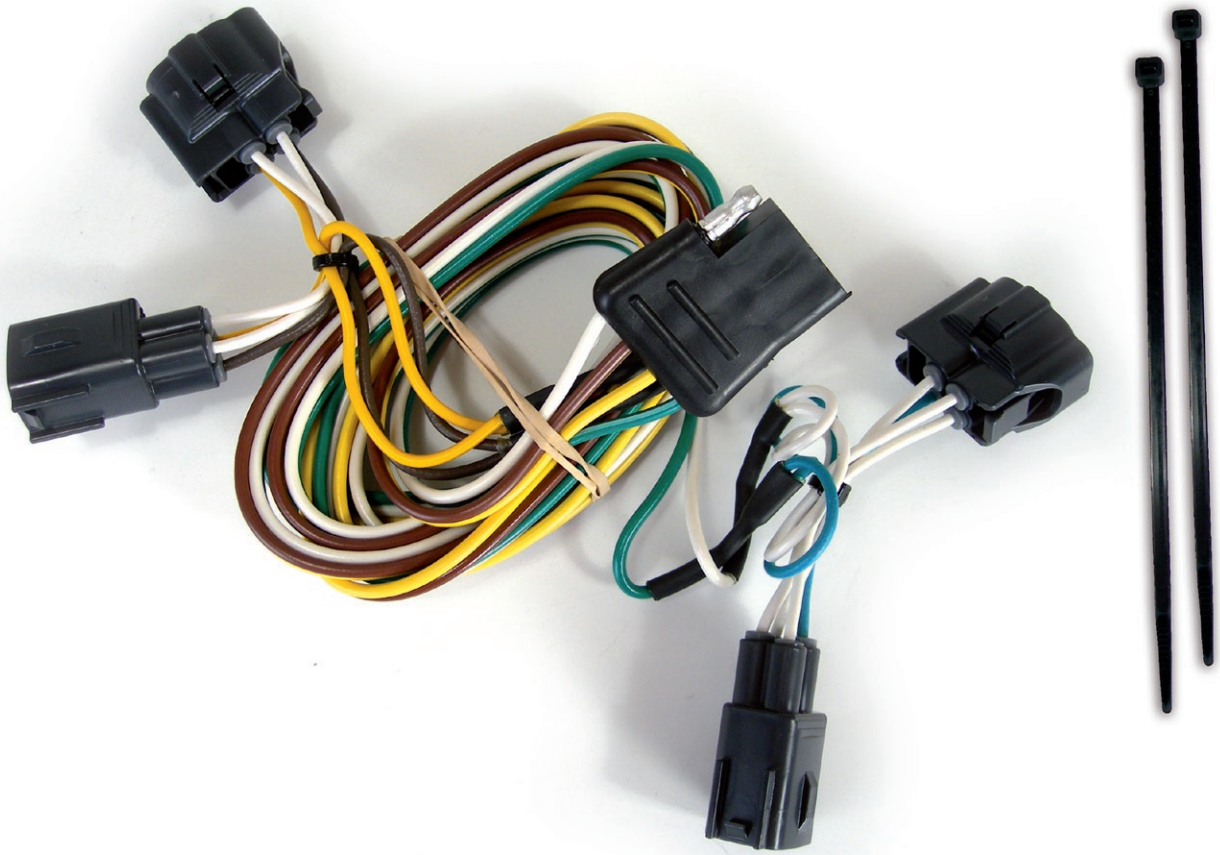

55329