

# 55334

CHRYSLER TOWN & COUNTRY  
DODGE CARAVAN  
DODGE DURANGO  
DODGE GRAND CARAVAN  
PLYMOUTH GRAND VOYAGER  
PLYMOUTH VOYAGER

## WIRING LOCATION GUIDE



### MUST READ FIRST!





All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### DURANGO

1. Remove the vehicles rear taillights by removing the two screws from each housing. **[A]** Slide the red locking tab on the harness connector to the unlocked position and disconnect the wire harness from both taillights. **[B]**
2. Remove the black air baffle **[B]** and pullout the rubber grommet **[E]** behind the taillight. Remove the hatch threshold **[C]** and pull back the interior panels on each side of the vehicle and remove the rubber grommet **[E]** behind the panels. **[D]**
3. Insert T-connector into space behind the air baffle, route the housings with yellow wire attached up through the grommet mounting location and mate them to the vehicle housings. **[F]**
4. Slit the grommet as shown in **[E]**. Place the T-connector wires into the slit and reseal into mounting location.
5. Secure black box in harness to metal behind rubber grommet using the double-sided tape provided and/or cable ties. Route 4-flat and housings with green wire attached up though inside rubber grommet mounting location. Slit rubber grommet as before and reseal into mounting location. **[D]**
6. Route the housings with green wire to passenger side under threshold or in jack compartment and repeat driver side steps working from inside of the vehicle out to the taillight. **[G]**
7. Route the 4-flat into the jack compartment for storage. **[G]**

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

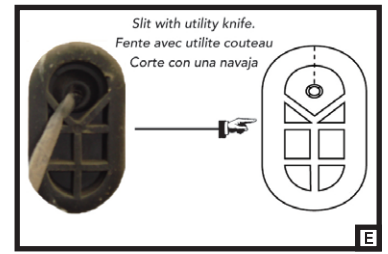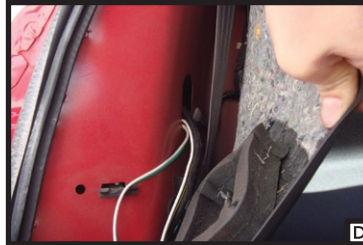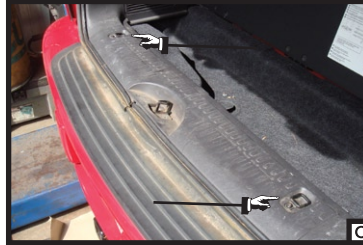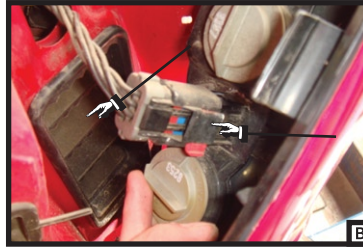

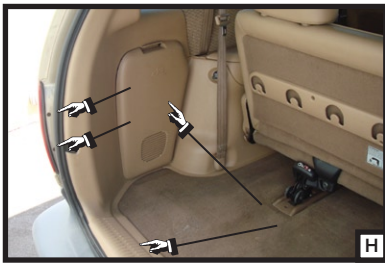


## MINI-VANS

1. Remove the vehicles rear taillights by removing the two screws from each housing. **[H]** Slide the red locking tab on the harness connector to the unlocked position and disconnect the wire harness from both taillights. **[B]**
2. Pullout the rubber grommets **[E]** behind the taillights. Remove the jack storage cover. Remove the hatch threshold **[H]** and pull back the interior panels on each side of the vehicle.
3. Insert T-connector into space behind the jack storage compartment **[I]** and route the housings with yellow wire attached, through the grommet mounting location on the driver side to the taillight and mate them to the vehicle housings. **[J]**
4. Slit the grommet as shown in **[E]**. Place the T-connector wires into the slit and reseal into mounting location.
5. Secure black box in harness to metal behind jack compartment using the double-sided tape provided and/or cable ties. Route the housings with green wire attached out the interior panel, under the hatch threshold to the passenger side and repeat steps 3&4. **[K]**
6. Store the 4-flat in the jack compartment. **[I]**
7. Replace any trim panels removed during the previous steps. Reinstall the tail lamp housing, careful to avoid any areas that would cut or pinch the wire.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

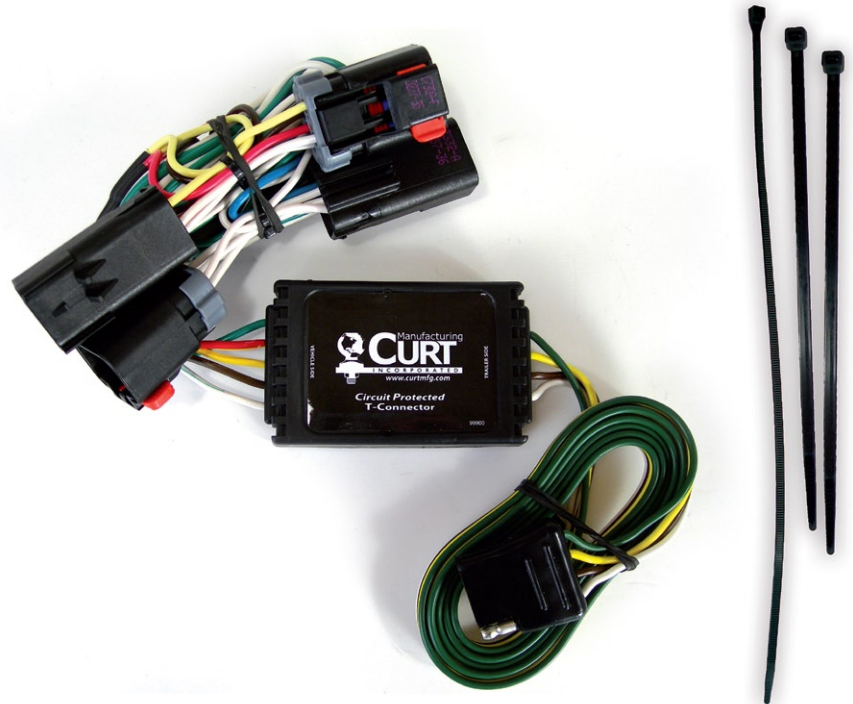

55334