

T-Connector Wiring Kit #55341

INSTALLATION INSTRUCTIONS

1. Read instructions thoroughly before beginning.

2. Open the rear door of the vehicle and remove the rear threshold (fig 1A) by removing its fasteners.

3. Partly remove the left (drivers) and right (passenger) side interior trim panels by removing the upper fasteners and carefully pulling the panel out and slightly away from the vehicle (fig. 1B).



4. Locate the vehicle wiring harness behind the interior trim panels. The harness will have connectors similar to those in the T-Connector harness.

5. Beginning with the left (drivers) side, separate the vehicle connectors by pressing on the locking tabs and gently pulling them apart, taking care not to damage the locking tabs.

6. Check the connectors for dirt and debris and clean if necessary.

7. Using the T-Connector harness ends containing the Yellow wires, firmly press the connector ends into separated connectors until the locking tabs engage. Take care not to damage the locking tabs.

8. Repeat steps 5, 6 & 7 for the right (passenger) side, using the connectors containing the Green wire.

9. Locate a clean accessible mounting location on the vehicle

near the wiring harness ends within reach of the white wire and grounding eyelet. Remove any debris or undercoating to expose a clean metal surface and drill a 3/32" hole.

Caution: Take care not to drill through the body or any exposed surface.

10. Mount the White wire using the ground screw and eyelet provided.

11. Confirm correct operation with a test light or by using a trailer.

Note: All connections must be complete for the T-Connector harness to operate.

12. Secure the T-Connector black box and any loose wires with cable ties (provided).

13. Route the yellow wire along the threshold channel and return the interior trim panels and threshold to their original positions and secure with the fasteners removed in steps 2 & 3, allowing the trailer connector to exit out under the right trim panel near the rear threshold. The trailer connector should be retained inside the vehicle when not in use.




#5534

T-Connector Wiring Kit

INSTALLATION INSTRUCTIONS

Fits: 1996-03 Toyota 4-Runner 4 Dr.

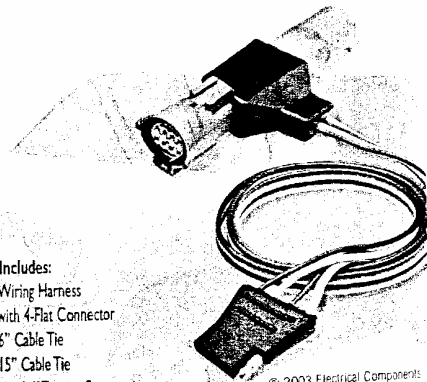

Kit Includes:

- (1) Wiring Harness with 4-Flat Connector
- (1) 6" Cable Tie
- (1) 15" Cable Tie
- (1) 10# Self Tapping Screw

© 2003 Electrical Components

55341-999

Looking for dependable trailer hitches and towing? Rely on CURT for quality and long-lasting products.