

55343

FORD ECONOLINE
FORD ESCAPE
MAZDA TRIBUTE

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. On the passenger's side remove the taillight assembly by removing the two phillips head screws holding it in place. [A][B] Locate the vehicle's taillight wiring harness. Disconnect the top two connectors from the taillight assembly. Repeat on the driver's side only disconnecting the middle connector. [C]

2. On the passenger side insert the T-connector end with the red wire in-between the top disconnected connectors. Insert the T-connector end with the green wire in-between the other separated connectors. [D]

3. Starting on the passenger's side route the T-connector end with the yellow wire and 4-Flat wire down thru the opening between the bumper and body under the taillight housing. [E] Route the wire along the backside of the bumper to the driver's side and up thru the opening. Insert the T-connector end with the yellow wire in-between the separated housing.



4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

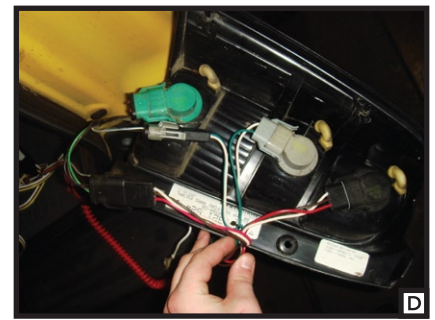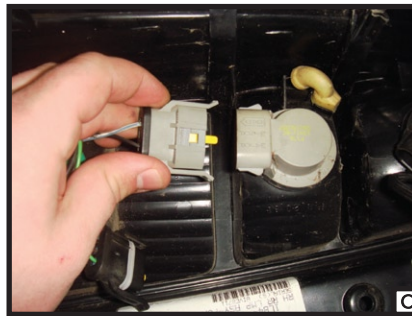



55343

Looking for dependable trailer hitches and towing? Rely on CURT for quality and long-lasting products.