

55354

JEEP CHEROKEE

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the rear hatch of vehicle. Remove the hatch threshold, spare tire, spare tire bracket using a phillips screwdriver and 10mm socket. **[A]**

2. Pull back the interior trim panel to reveal a housing connection matching that of the T-connector. **[B]** Separate the harness connectors, being careful not to break the locking tabs. **[C]**

3. Using a pry tool, pry trim fasteners out on black plastic wire bracket and adhere black box on T-connector to metal using the double-sided tape provided. **[D]**



4. Insert the T-Connector between the harness connectors and lock into place. Be sure that connectors are fully inserted with locking tabs in place. **[D]**

5. Locate a suitable grounding point near the adapter. (Do not drill into vehicle floor or bed). Clean dirt and rustproofing from area. If needed drill a 3/32" hole and secure the white wire using the eyelet and screw provided.

6. Route the 4-flat wire to the center of the vehicle and out of the hatch when in use. When not in use roll up and store in an out of the way location in the rear cargo area. **[E]** Reattach the interior panel, hatch threshold, spare tire and spare tire bracket to their original positions.

WARNING!

Verify miscellaneous items may be hidden behind or under and surfaces before drilling to avoid damage to vehicle and/or personal injury.

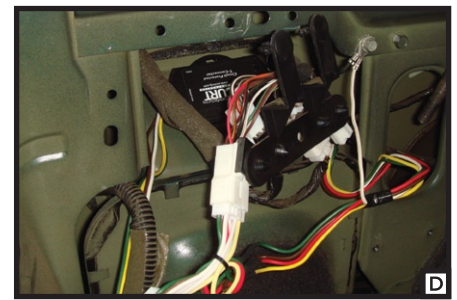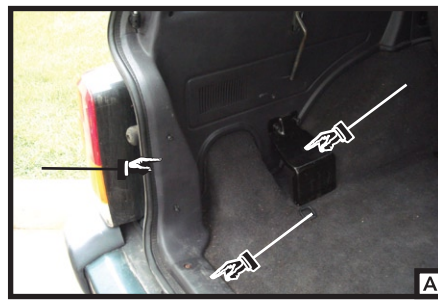



55354

Looking for dependable trailer hitches and towing? Rely on CURT for quality and long-lasting products.