

55359

CHEVROLET S-10
GMC S-15 & SONOMA
ISUZU HOMBRE

WIRING LOCATION GUIDE




MUST READ FIRST!


All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Locate the vehicle's taillight wiring along the inside of the left rear frame rail. (T3) This harness will have a connection point with connectors matching the ends of the T-connector adapter. **A**
2. Separate the vehicle's connectors, being careful not to break the locking tabs. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary.
3. Insert the T-connector harness between the vehicles connectors.
4. Locate a suitable grounding point near the connectors such as the vehicle's frame or crossmember (Do not drill into floor or bed). Clean dirt and rustproofing from area. Drill a 3/32" hole and secure white wire with using screw provided.
5. Route the T-connector harness to the center of the vehicle and secure wire to vehicle crossmember or other mounting or otherpoint using electrical tape or tie straps.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage vehicle and/or personal injury.

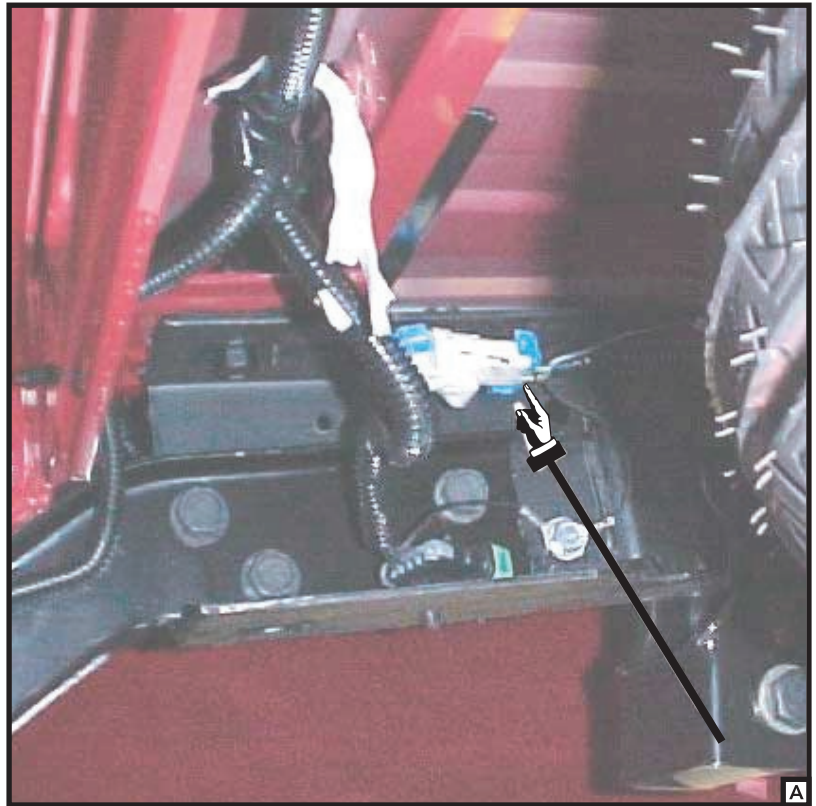

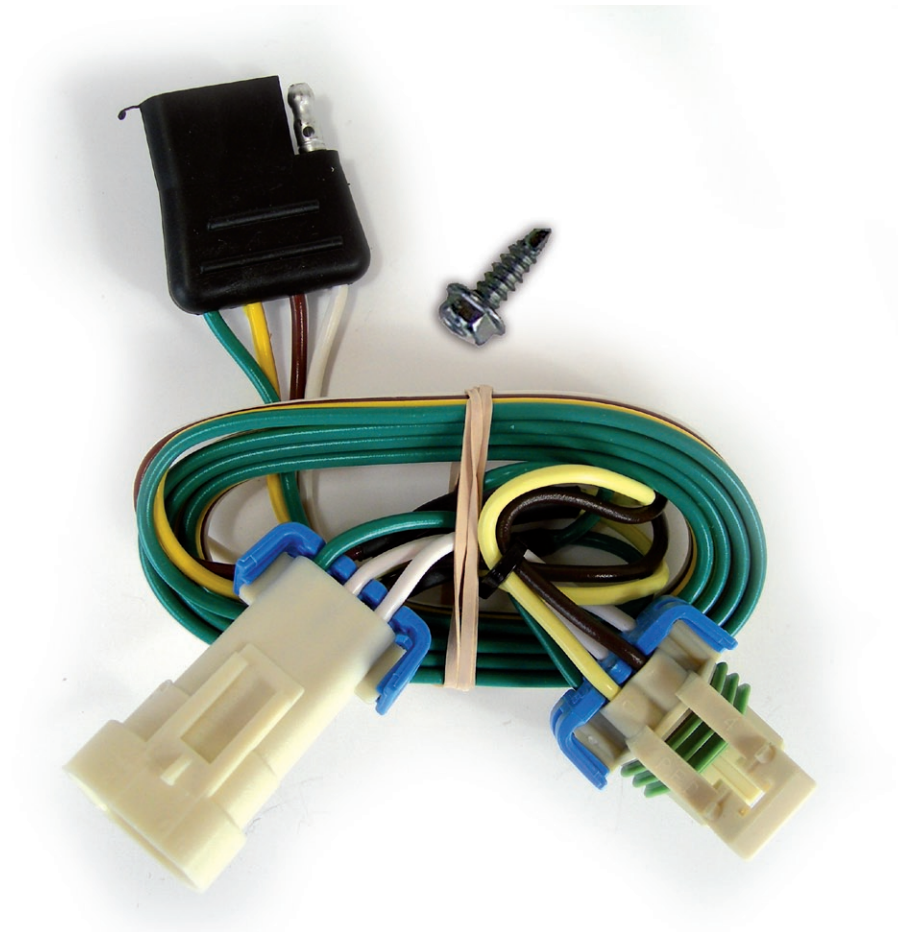

55359