

55363



JEEP TJ
JEEP WRANGLER

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

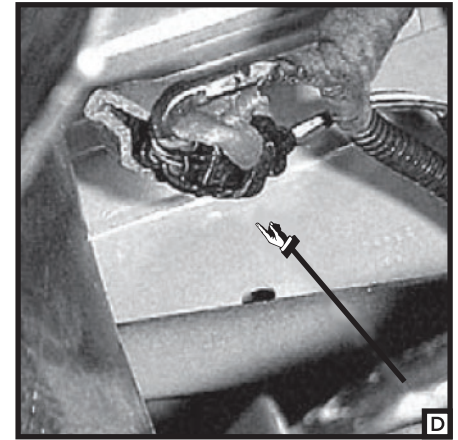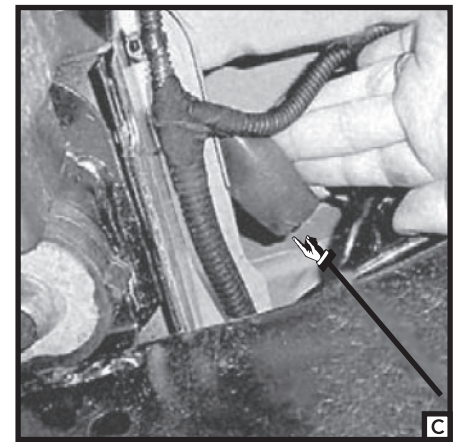

1. Locate the black plastic protective covers on each side of the vehicle, under the vehicle next to the bumper. Remove the two plastic trim fasteners on each side, securing the protective covers, to access vehicle's wiring harness. [A] & [B] Locate the vehicle's wiring harness behind the protective cover. There will be connection points matching the ends of the T-Connector adapter.

2. Beginning on the driver's side, remove the foam tape attached to the plugs [C] and separate the vehicle's wiring harness connectors, being careful not to break the locking tabs. Ensure that the mating surfaces are free of dirt. Clean if necessary.


3. On the driver's side, insert the T-Connector end, with the yellow wire, between the vehicle wiring connectors and lock into place. [D] Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.

4. Repeat steps 2 & 3 on passenger's side with T-Connector end containing the green wire.

5. Locate a suitable grounding point near the adapter such as the vehicle frame or cross member. (Do not drill into vehicle floor or bed.) Clean dirt and rustproofing from area. Drill a 3/32" hole and secure white wire using eyelet and screw provided.

6. Bundle and secure wires to the vehicle's cross member using the cable ties provided. Route the 4-Flat to the center of the vehicle's cross member using cable ties provided. Reinstall protective covers removed in step 1.

WARNING!
Verify miscellaneous items that may be hidden behind or under any surface to avoid damage to vehicle and/or personal injury.

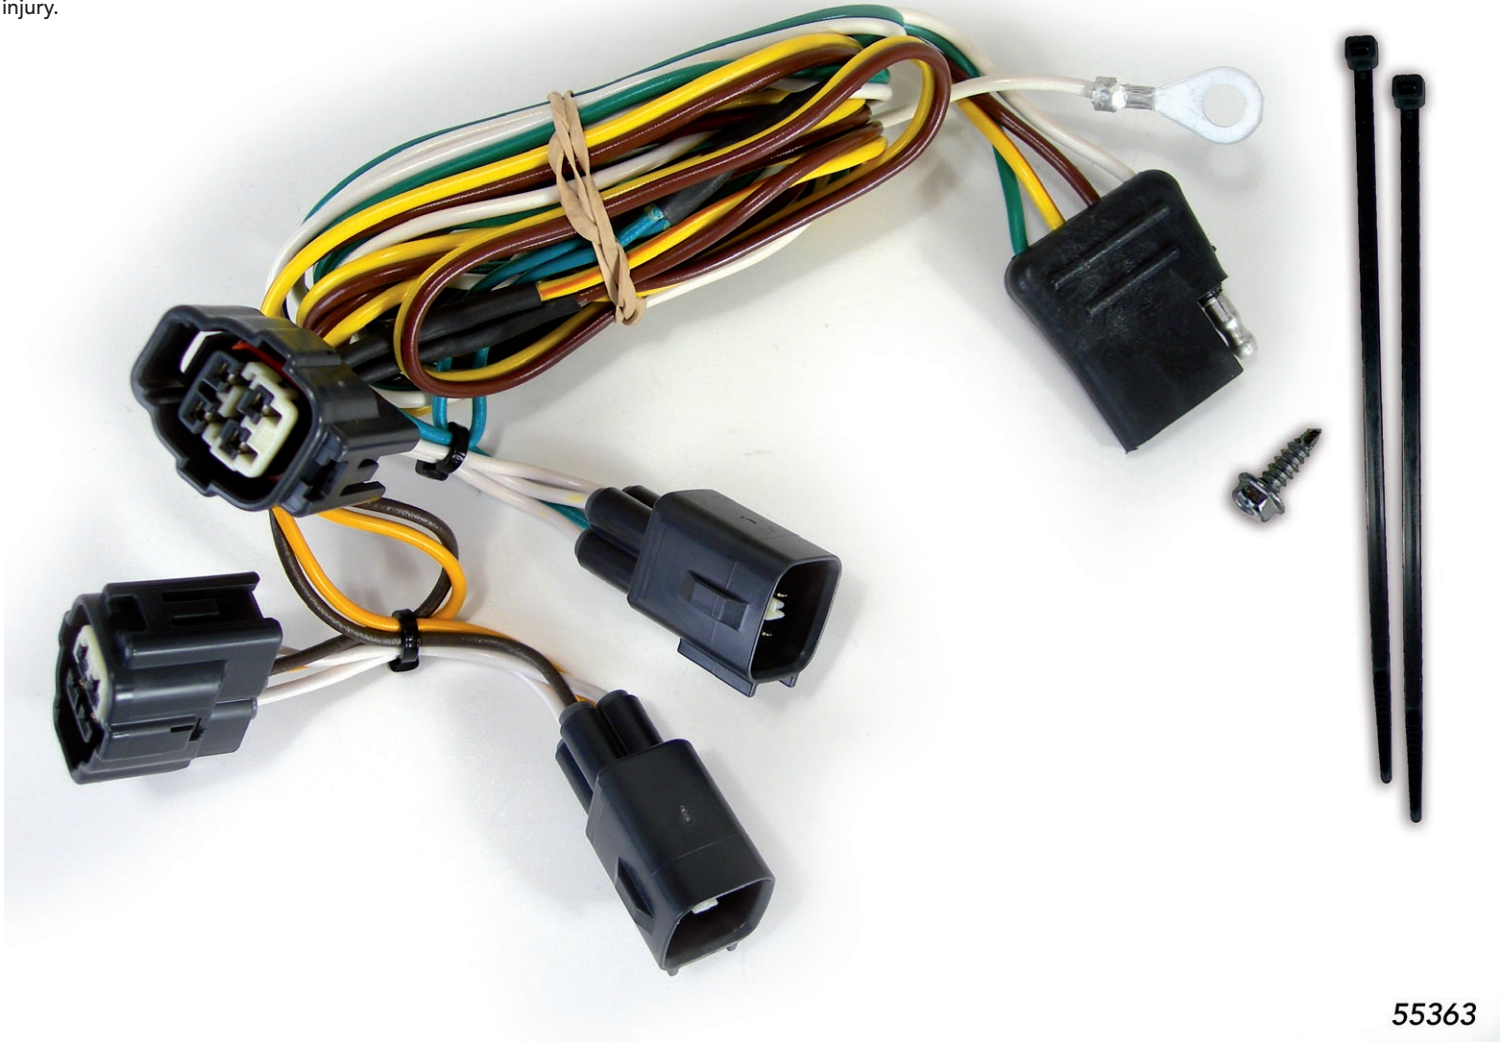

55363