

55365

TOYOTA LANDCRUISER
LEXUS LX470

WIRING LOCATION GUIDE




MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Lower the vehicle's spare tire to gain access to the vehicle's tow harness plug.
2. Locate the vehicle's rear passenger side trailer connection with cap and remove tape and cap. (S7)
3. Plug the T-connector harness into the vehicle's connector. **A**
4. Locate a suitable grounding point near the connectors such as the vehicle's frame or crossmember (Do not drill into vehicle floor or bed). Clean dirt and rustproofing from area. Drill a 3/32" hole and secure white wire with eyelet using screw provided.
5. Route the T-connector harness to the center of the vehicle and secure wire and black converter to vehicle crossmember or other mounting points using cable ties and double-sided tape provided.
6. Raise the vehicle's spare tire back into it's original position.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

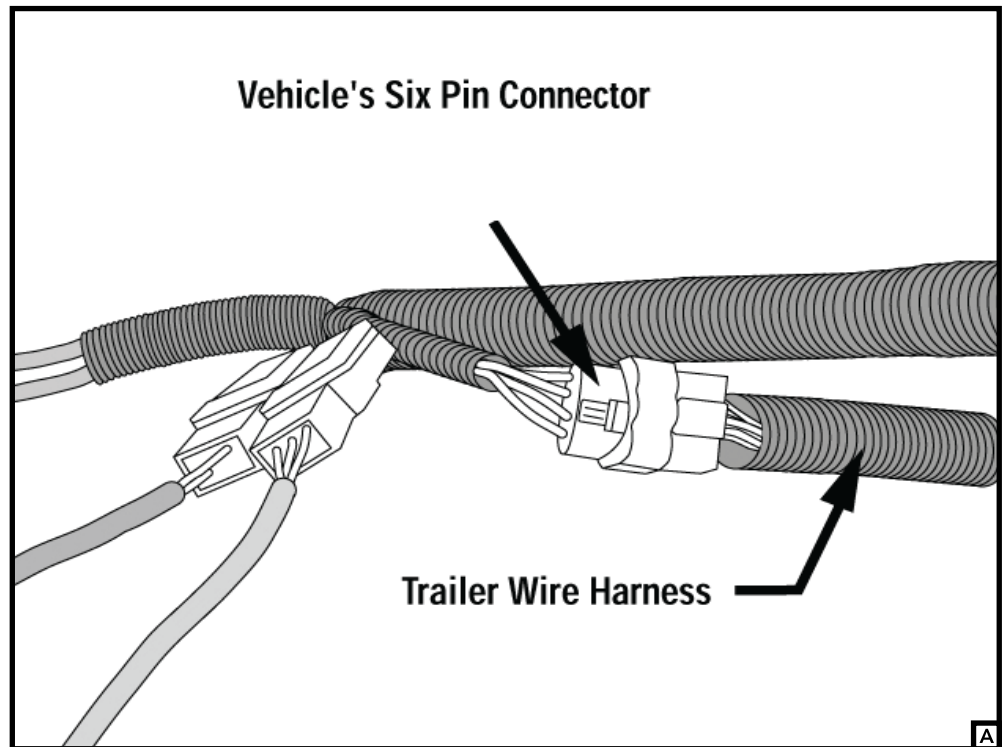



55365