

55368

DODGE RAM VAN

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer


1. Locate the tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the bumper, on the driver's side of the vehicle.


2. Remove protective cap [B] (and save) from connector [A]; check to see that the mating surfaces of the connectors are free of dirt. Clean if necessary.

3. Connect the T-connector adapter end [C] to the vehicle's connector [A]. Be sure that the T-connector is fully inserted with locking tabs in place.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

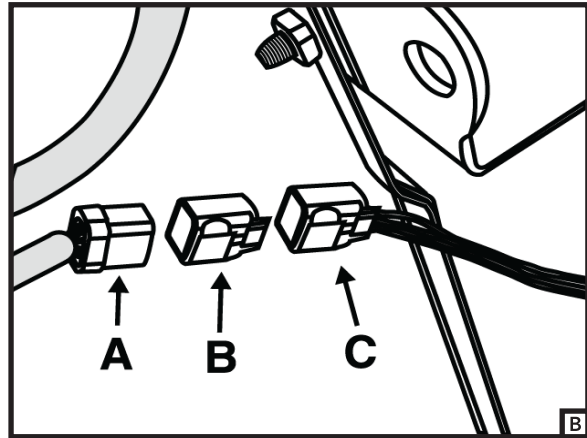

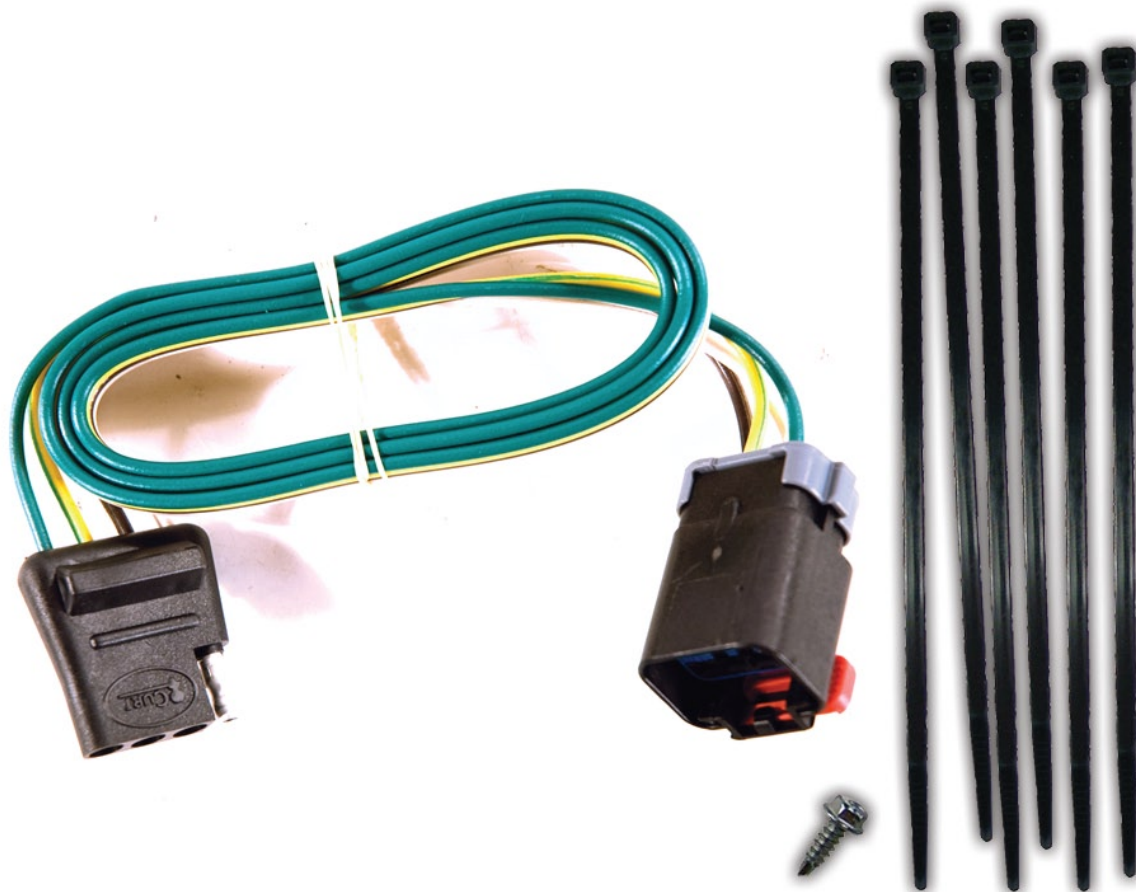

55368