

55377

CHEVROLET EXPRESS
GMC SAVANA

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the rear doors and remove the rear scuff panel. [A] On the both sides remove the interior trim panels directly behind the taillights. Locate the vehicles taillight wiring harness it will have connectors similar to those on the T-connector harness. [E]

2. Starting on the driver's side separate the vehicles connectors being sure not to damage the locking tabs. Insert the T-connector end with the yellow wire in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

3. Route the T-connector end with the green wire under the removed scuff panel to the passenger side. [C] Repeat step 2 on the passenger side using the green wire.


4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided. [D]

5. Adhere the black converter box to the frame of the van using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Route the 4-flat wire to the center of the vehicle and out the rear doors when in use. When not in use roll up and store in an out of the way location in the rear cargo area.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

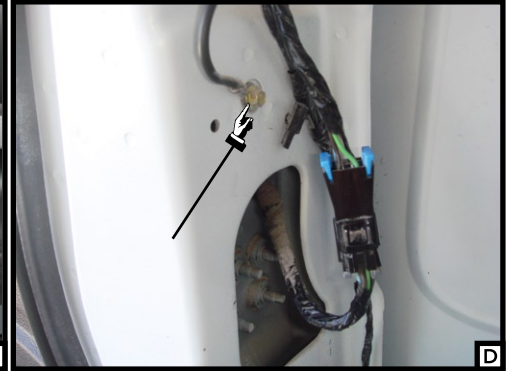



55377

Looking for dependable trailer hitches and towing? Rely on CURT for quality and long-lasting products.