

55380

MITSUBISHI MONTERO

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the hatch and remove the taillight housings by removing two phillips head screws on each. **A** Pull taillight housings away from vehicle being sure not damage the alignment tabs. **B**
2. Starting on the drivers side separate the vehicles taillight wiring harness connectors. **B** Insert the T-connector end with the yellow wire in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.
3. Route the T-connector end with the green wire and the 4-flat wire down through the opening under the taillight assembly. **C** Under the vehicle route the green wire to the passenger side along the backside of the bumper and up through the opening on the passenger side. Repeat step 2 on the passenger side using the green wire.




4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided. **D**

6. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

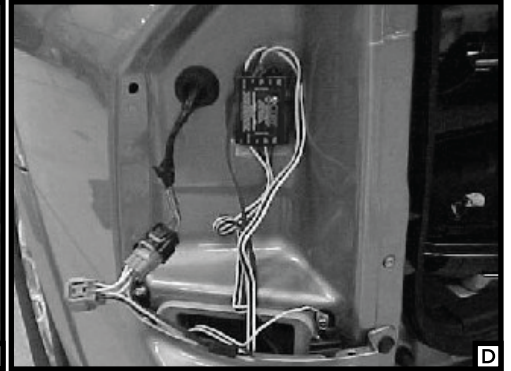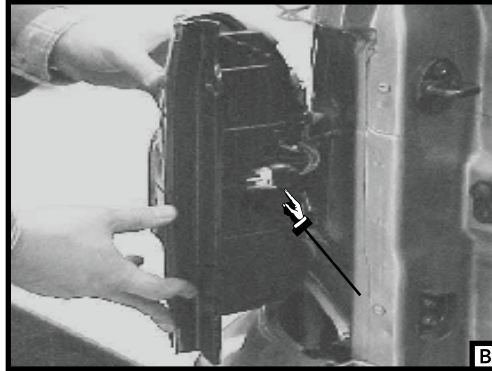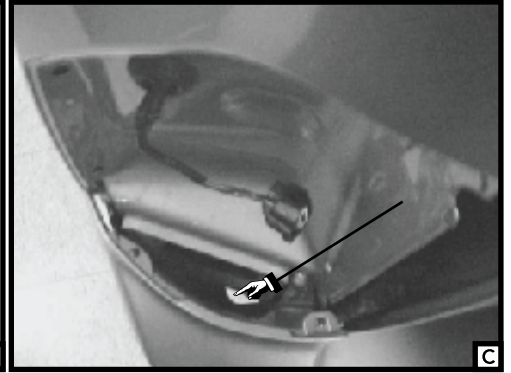



55380