

55381

DODGE DAKOTA
DODGE DURANGO
DODGE RAM PICKUP
DODGE RAM, VAN
DODGE SPARTAN
JEEP GRAND CHEROKEE

WIRING LOCATION GUIDE





MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer

1. Locate the tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the bumper, on the drivers side of the vehicle. The harness will have a connector similar to that of the T-connector.
2. For easeness of install, unfasten the 7-way connector from it's mounting bracket by removing the mounting screws or bolts.
3. Separate the 7-way connector from the vehicle's wiring harness by carefully pressing the red locking tab sideways and pulling apart. Once apart check to see that the mating surfaces of the connectors are free of dirt. Clean if necessary. **[A]**
4. Position the T-connector between the vehicle harness and the 7-way connector. Firmly press the ends together until the locking tabs are engaged. Push the red locking tabs back to their original position. **[B]**
5. Reinstall the screws or bolts and test the installation with a test light or trailer.

WARNING!
Very miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury

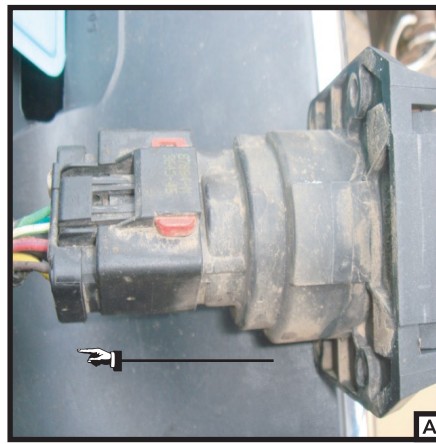

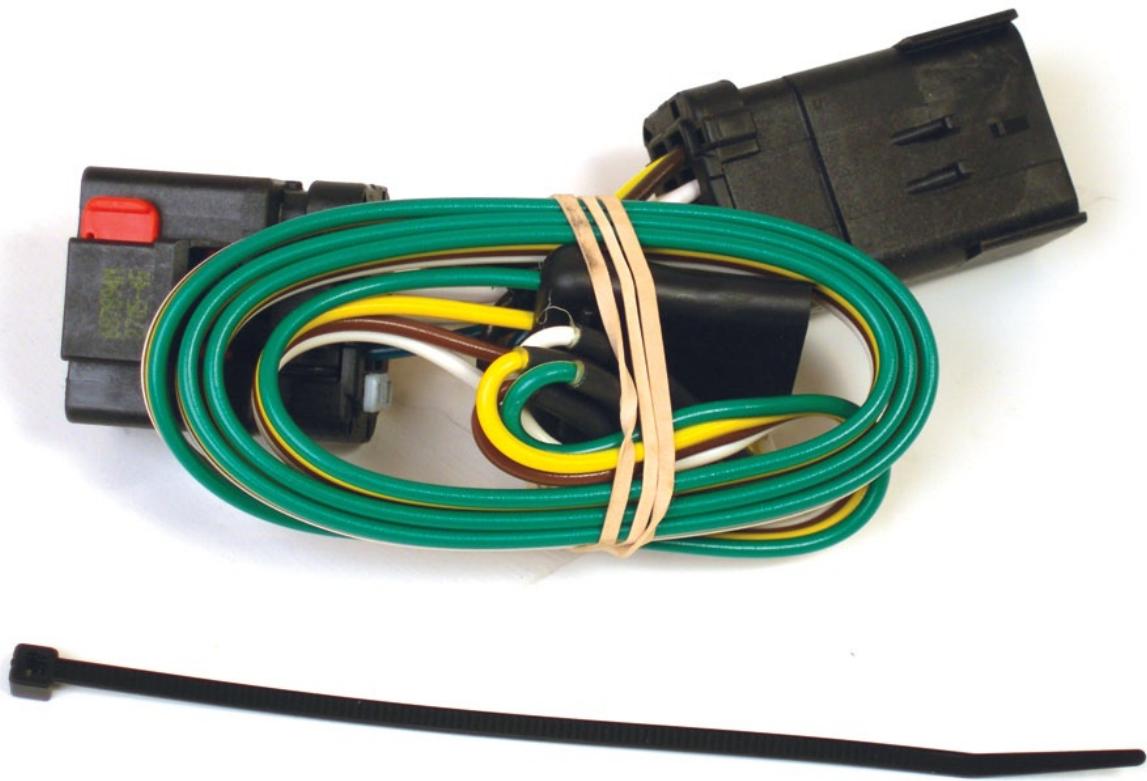

55381