

55383

BUICK RENDEZVOUS
PONTIAC AZTEK

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.







1. Open the rear door on the vehicle. Temporarily remove the rear storage (or air compressor) compartment doors and the rear threshold plate. [A] [B]

2. Temporarily remove both taillight assemblies by removing the two screws on the inboard side of each taillight. [C] Pull the rubber grommets away from the vehicle's body to expose the electrical connectors. [D] Gently lift the locking tabs and separate the electrical connectors.

3. With the vehicle wiring and grommets exposed, slit the grommets with a utility knife as needed to allow the T-connector wiring to pass through and reseal grommet. [E]

4. Partially pull back the side rear trim panels (Two cargo hold brackets will need to be removed on each side). [A] Starting on the right side route the connector with the green wire up through the storage compartment, behind the rear trim panel and out the passenger's side rear taillight. The access hole to the tail light opening will have a piece of gray foam near it. Plug the T-Connector between the mating plug on the taillight socket and the vehicle's wiring harness. [F]

5. Locate a suitable grounding point. Drill a 3/32" hole and secure the white wire using the eyelet and screw provided. Do not drill into any exposed surfaces.

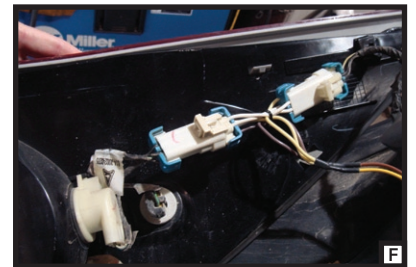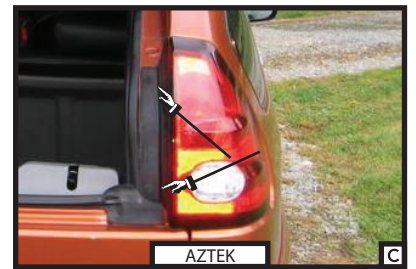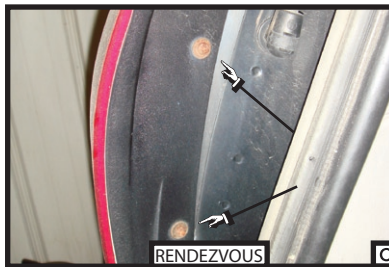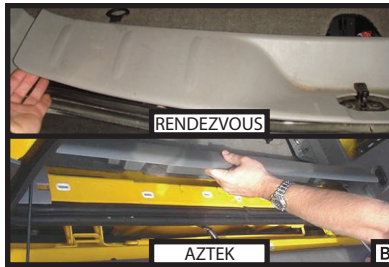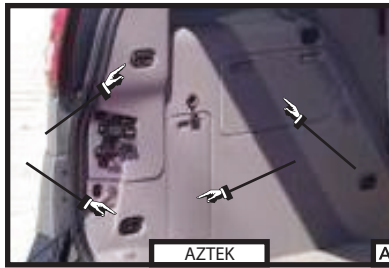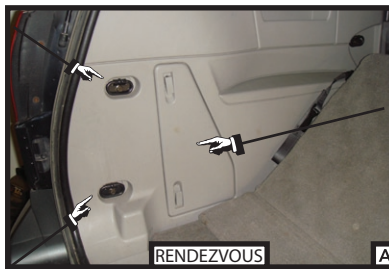

6. Route the connectors with the yellow and brown wires through the right side storage compartment and behind the right side rear trim panel. Continue routing underneath the threshold, behind the left side rear trim panel and out the driver's side rear taillight. Plug the T-Connector between the mating plug on the taillight socket and the vehicle's wiring harness.


7. Place T-Connector wiring in slit of grommet and reseal grommet.

8. Test the installation with a test light or trailer.

9. Replace all trim panels removed during the previous steps. Reinstall the taillight housing, positioning the wire harness between the housing and the vehicle body. Store 4-Flat in jack storage compartment when not in use.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surfaces before drilling to avoid damage to vehicle and/or personal injury.

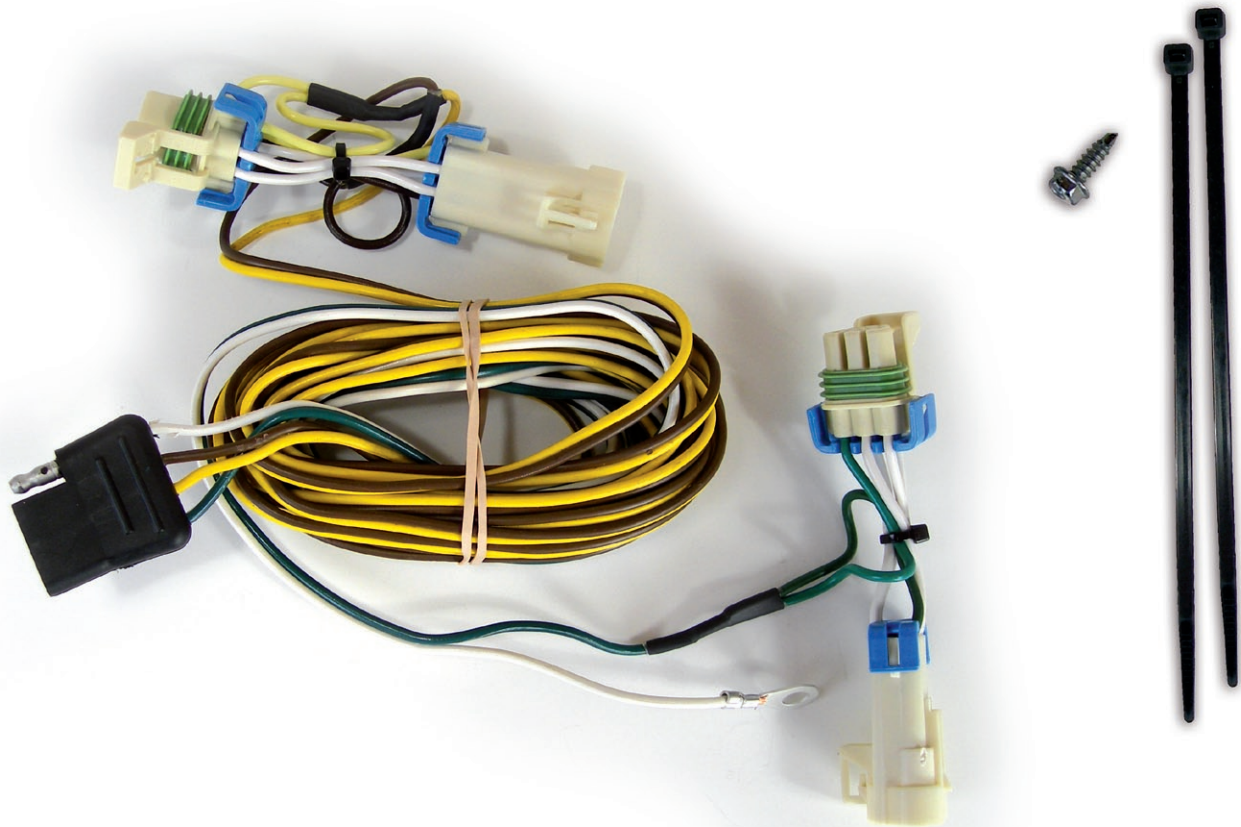

55383