

# 55441

## NISSAN FRONTIER NISSAN PATHFINDER NISSAN XTERRA SUZUKI EQUATOR

### WIRING LOCATION GUIDE



#### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. The vehicle's factory tow plug is located on the driver's side, along the frame rail behind the rear bumper (A,B). The connector will be similar to the one on the 4-Flat harness. Remove the protective cap, taking care not to damage the locking tabs.

2. Insert the 4-Flat harness connector into the vehicle's tow harness connector making sure that the locking tab is in place (C,D).





3. Route the 4-Flat to the center of the vehicle and secure in a convenient out of the way location.

#### Vehicles without Factory Tow Package:

Unless an OEM relay harness (not included) is installed the taillights will not work. See your Nissan dealer for more information on the required harness.

#### WARNING!

If drilling is needed verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

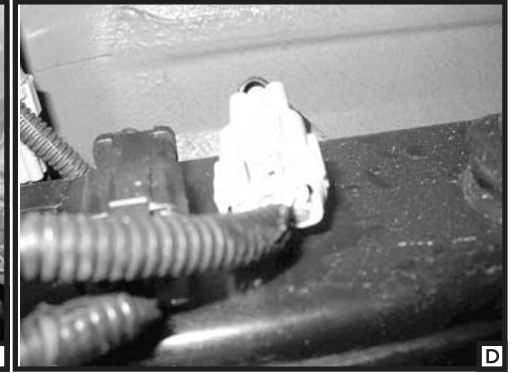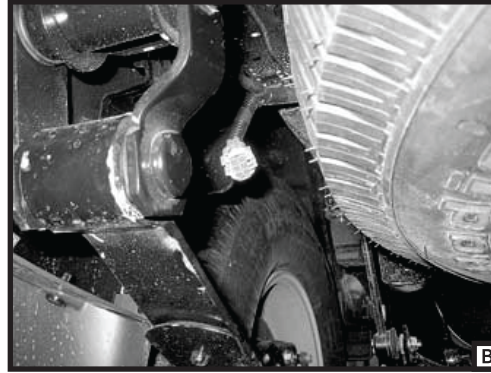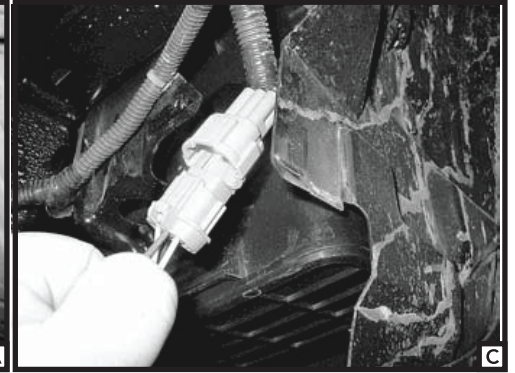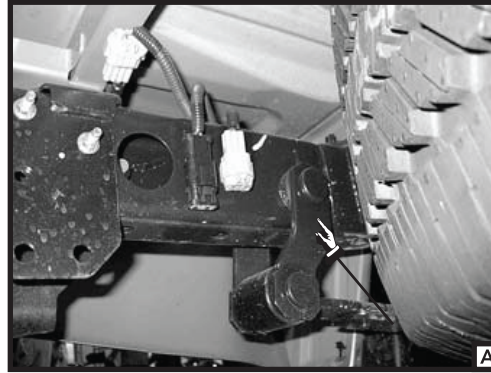



55441