

55504

DODGE RAM 1500
DODGE RAM 2500/3500

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Under the vehicle locate the vehicles taillight wiring harness in positions T3,T5. [A] It will have connectors similar to those on the T-connector. On both sides separate the vehicles connectors being sure not to damage the locking tabs. [B]

2. On the drivers side insert the T-connector end with the yellow wire in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

3. Route the T-connector end with the green wire under the vehicle to the passenger's side taillight wiring harness. Make sure to avoid any location that may pinch or cut the wire. Repeat step 2 on the passenger's side using the green wire.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.


5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



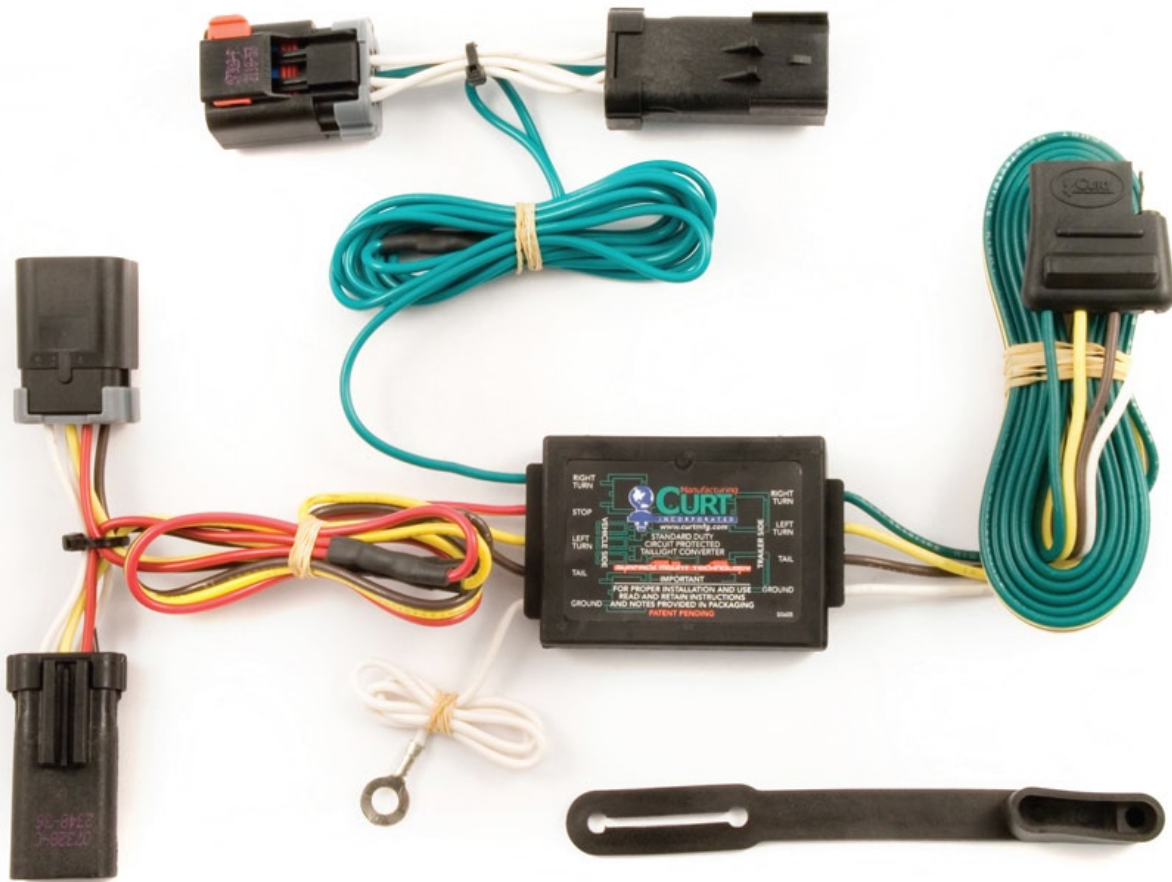

55504