

55540

CHEVROLET EXPRESS
GMC SAVANA

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Remove rear trim fascia and rear interior trim panels (if equipped) near the rear entry doors. [A] & [B] Locate the vehicle's taillight wiring harness. [B] The taillight wiring harness will have connection points matching the ends of the T-connector.

2. Disconnect the vehicle wiring harness connectors on the driver side, being careful not to damage the locking tabs. [C]

3. Plug the T-connector end with the yellow wire in-between the mating plugs on the driver's side taillight socket and vehicle wiring harness. [D] Ensure that the connectors are fully inserted together utilizing existing and supplied locking tabs.



4. Locate a suitable grounding point near the harness such as an existing metal screw with nut. [D] If no such feature exists, drill a 3/32" hole and secure white wire using eyelet and screw provided.


5. Repeat steps 2 & 3 on the passenger's side with the T-connector end containing the green wire.

6. Tuck the green wire under the floor trim (threshold) panel. Replace the vehicle's rear trim panels.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

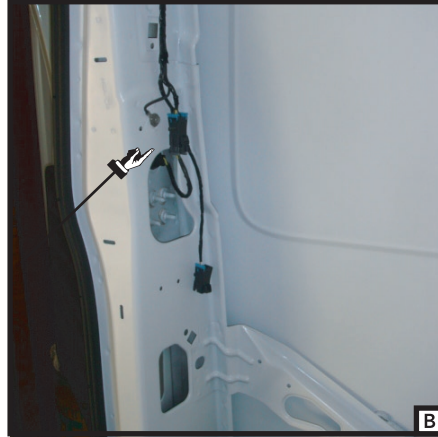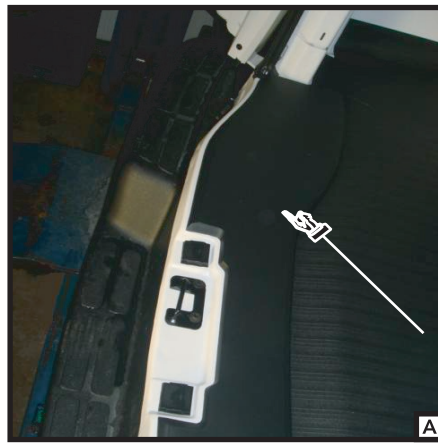

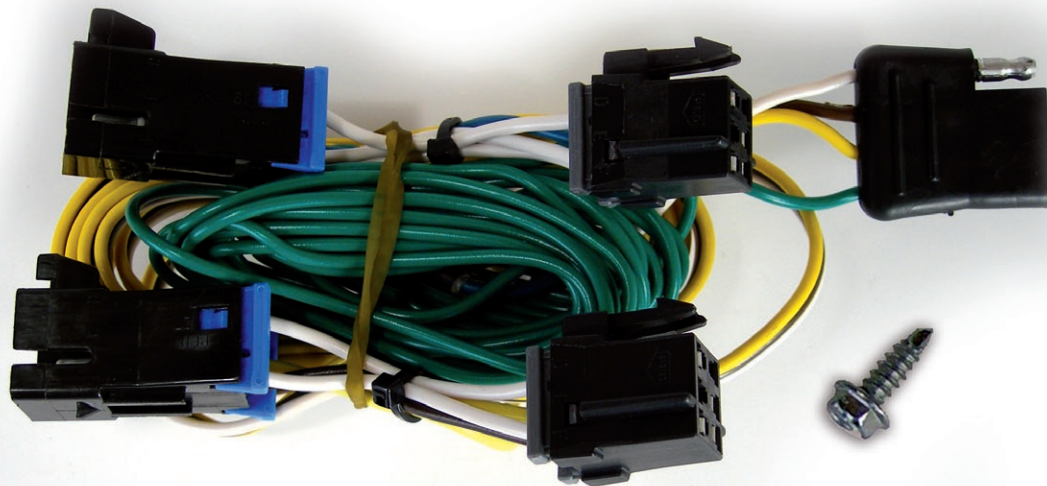

55540