

55570

NISSAN QUEST

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the rear hatch and remove the side access panel. Partially remove the rear trim panels by removing plastic wing nuts holding them in place. **A** Remove the rear scuff panel. **B**

2. Starting on the drivers side locate the vehicles taillight wiring harness behind the rear trim panels. The harness will have connectors that are similar to those on the T-connector. **C** Separate the connectors being sure not to damage the locking tabs. Insert the T-connector end with the yellow wire in-between the separated connectors. **D** Make sure the connectors are fully inserted with locking tabs in place. Insert the T-connector's power wire into its mating connector located next to the taillight wiring harness. **D**

3. Route the T-connector end with the green wire out from under the rear trim panel and along the rear scuff panel to the passenger side. **E** Repeat step 2 on the passenger side using the green wire.





4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided. **D**

5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Insert the 10 AMP fuse into the slot labeled tow lamp in the fuse box next to the battery. **F**

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

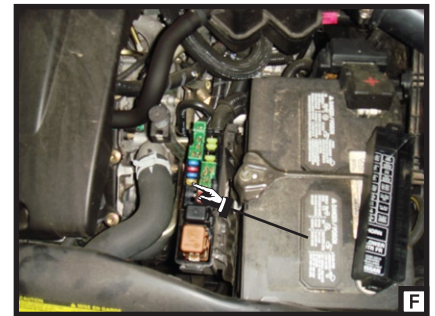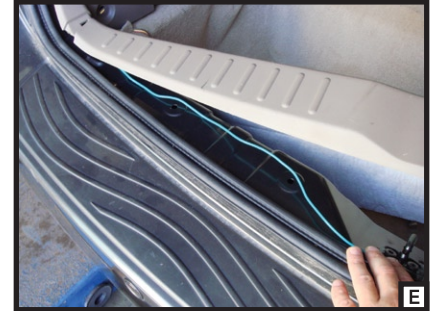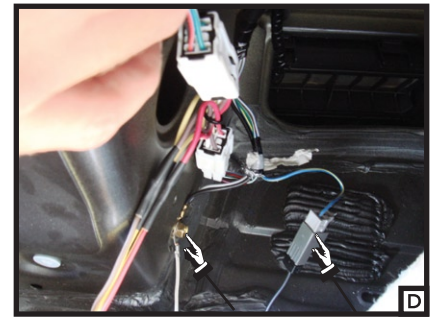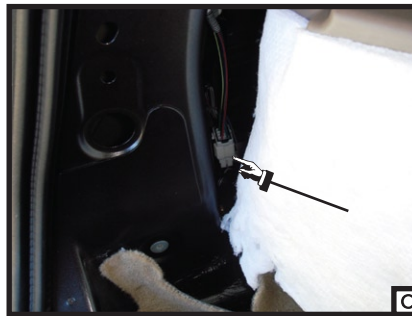



55570