

55580

TOYOTA SIENNA

WIRING LOCATION GUIDE




MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Carefully remove both of the vehicle's rear taillight housings by removing the two bolts that hold each taillight in place. **[A]**
2. Remove the vehicle rear threshold by unscrewing the three cargo bolts and carefully prying the threshold away from the vehicle. **[B][C]**
3. Carefully pull back driver's side trim panel, being careful not to break clips or tabs. **[D]**
4. On passenger's side, open the vehicle's jack storage compartment to expose the opening to the taillight assemblies. **[E]**
5. From the drivers side, route the T-connector's harness ends containing the yellow wire out from inside the vehicle through the taillight opening.
6. Disconnect the vehicle's wiring harness connector from the taillight assembly, being careful not to damage the locking tabs. Plug the T-connector's harness between these separated halves. **[F]**
7. Route the harness containing the green wire across the vehicle under the threshold cover removed in step 2. Route the T-connector harness containing the green wire out from the inside the vehicle through the taillight opening. Repeat step 6 using the harness containing the green wire.
8. Tuck the green wire under the threshold panel and secure. Re-install plastic trim panels, jack storage panel and taillights.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

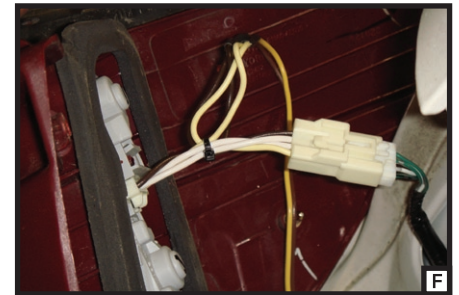



55580