

55593

MAZDA CX-7

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the hatch and remove the cargo nets and floor coverings. **A** Remove cargo area cover to reveal the spare tire compartment. **B** **C** Remove the rear scuff panel by prying out using a trim puller being careful not to damage the plastic tabs holding it in place. **D** Remove the storage tray on the passenger side of the spare tire. **E** Remove the rear access cover on the passenger side trim panel. **F**



2. Behind the access cover locate the vehicles factor tow harness. The connector on the vehicles tow harness will have connection points that match the harness's connector. Insert the harness connector into the vehicles connector make sure the connector is fully inserted with locking tabs in place.

3. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

4. Route the 4-flatout from under the rear trim panel and to the center of the vehicle and out of the rear hatch when in user. When not in use roll up and store in an out of the way location in the spare tire storage compartment.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

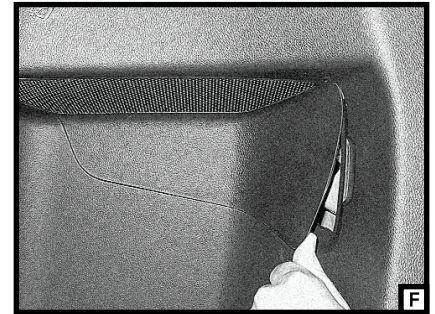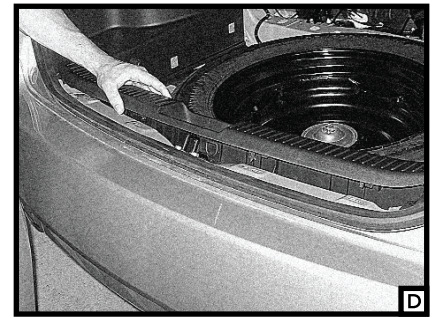



55593