

# 55597

## CHRYSLER ASPEN DODGE DURANGO

### WIRING LOCATION GUIDE



#### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### English


1. Open the vehicle's tailgate and remove each of the taillights by removing the two fasteners (A) on each using a pry tool. Carefully pull the taillight to the rear of the vehicle (B) to remove it from the vehicle.
2. Beginning with the driver's side, route the T-Connector harness end with the yellow wire out from under the vehicle, through the body opening to the left taillight housing. (D)
3. Disconnect the vehicle harness connector from the driver side taillight, taking care not to damage the locking tabs (C).
4. Position the T-Connector ends between the separated vehicle connectors. Firmly press the connector ends together until the locking tabs engage. Make sure the connectors are fully inserted with locking tabs in place (D).
5. Route the T-Connector end with the green wire underneath vehicle to the passenger side of the vehicle.
6. Repeat Step 4 on the passenger side using the T-Connector end with the green wire.

**WARNING!**  
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

7. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included.

8. Secure all wires using cable ties provided. Mount the black converter box with double sided tape on back of converter.

9. Reinstall all items removed during install.

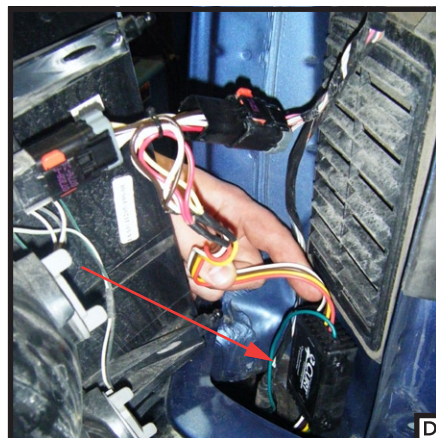



55597

Looking for dependable trailer hitches and towing? Rely on CURT for quality and long-lasting products.