

56040

SUBARU FORESTER
SUBARU OUTBACK WAGON

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the tailgate and remove cargo area cover (A). Under the cover remove the trays from the center and the driver side of the vehicle (B, C). By removing the plastic fasteners holding them in place (D).

2A. Forester- The harness connector is on the driver side under the trays (E,F).

2B. Outback Wagon- The harness connector is tucked up behind the driver side inner fender trim, just visible near the rubber grommet in the floor and the cargo anchor (G).

3. Insert the harness connector into the vehicles connector being sure it is fully inserted with locking tabs in place (H).

4. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

WARNING!







Verify miscellaneous items that may be hidden behind or under any surfaces before drilling to avoid damage to vehicle and/or personal injury.

5. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white ground wire using eyelet and screw provided.

6. Install 10 amp fuse (red) into inline fuse holder.

7. Reinstall all items removed during install.

8. Route the 4-flat wire to the center of the vehicle and out the hatch when in use. When not in use roll up and store in an out of the way location in the rear cargo area.

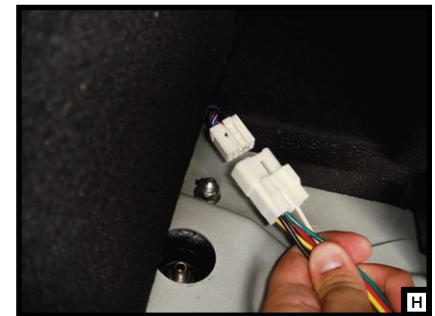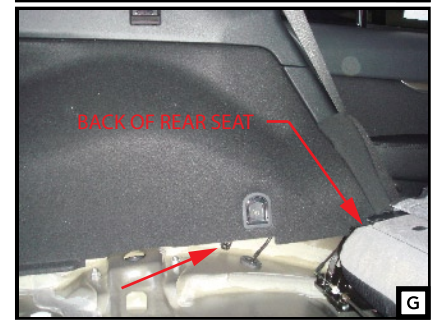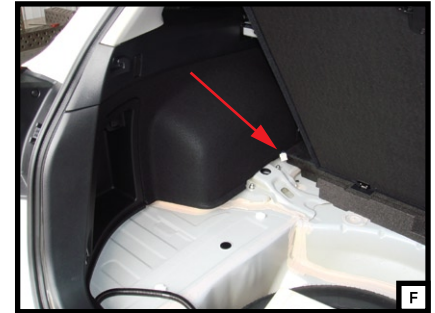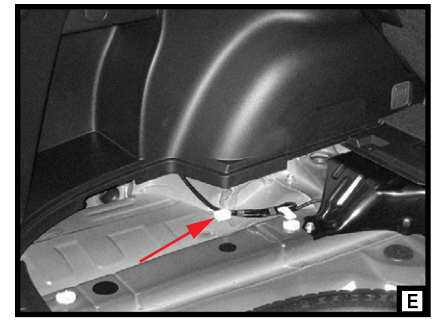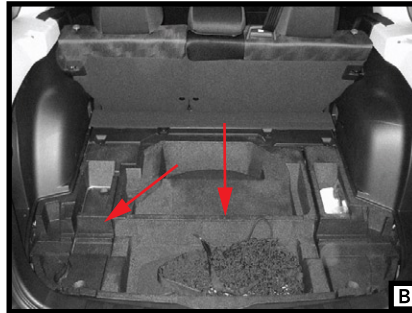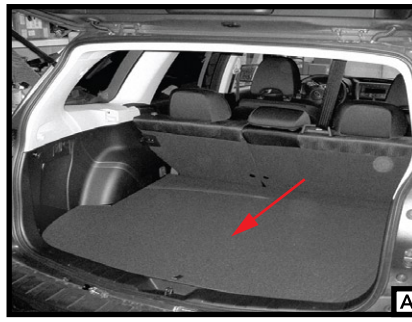



56040