


56042

TOYOTA HIGHLANDER

WIRING LOCATION GUIDE

MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

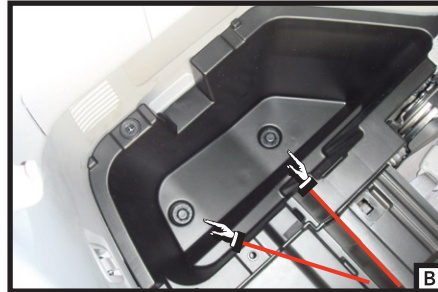

1. Open the vehicle's rear tailgate. On the driver's side, remove access panels, threshold, trunk floor panels and trays. Set aside all items removed being careful not to damage parts. **A** **B** **C**

2. On the driver's side, locate the vehicle's factory 4-Pin tow harness connector. Check to see that the mating surfaces of the vehicle harness connectors match the Tow-Plug Adapter end. All connector surfaces should be clean and free of dirt. **D**

3. Insert the 4-Pin Tow-Plug Adapter and lock into place. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place. **E**

4. Reposition the trays, trunk floor panels and access panels and reattach the threshold.

NOTE:
Store 4-Flat in trunk or rear cargo area when not in use.





56042