

56077

BUICK TERRAZA
CHEVROLET UPLANDER
PONTIAC MONTANA SV6
SATURN RELAY

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the vehicle's trunk/tailgate & remove the threshold trim along the rear doors and the interior trim panel on the left (drivers) side. [A]

2. Locate the vehicles taillight wiring harness behind the trim panel. It will have a connector similar to that on the T-connector harness. Some models will have a single connector and some models have a connector already mated with another connector. If already mated, press locking tab down and remove and insert T-connector. If a single connector, mate with spouse T-connector end.

4. When inserting connector ends, push until they lock into place. Taking care not to damage the locking tabs. [C]




5. Confirm correct operation with a test light or by using a trailer.

6. Re-install the interior trim panel, routing the T-connectors 4-flat trailer connector out under the panel to the center of the vehicle.

7. Replace the threshold trim plate to its original position using the fasteners removed in step 1.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

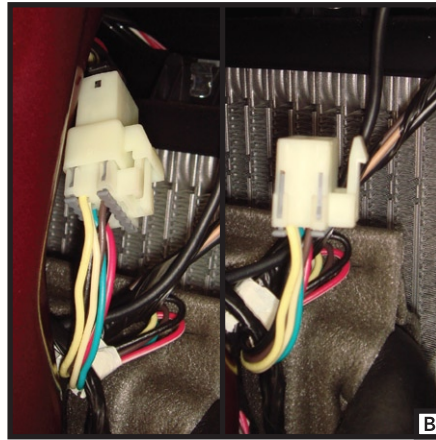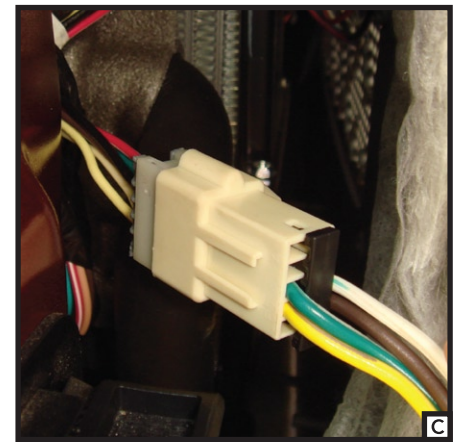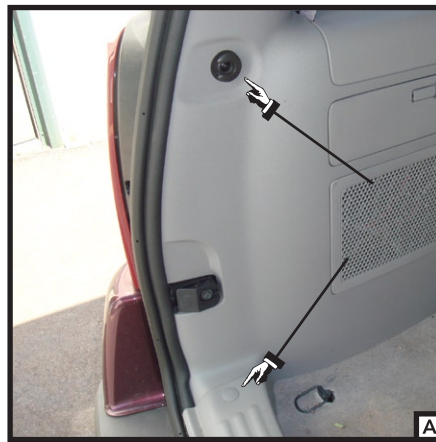



56077