

# 56088

FORD MUSTANG

## WIRING LOCATION GUIDE



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the trunk and remove the rear scuff panel by removing two plastic fasteners and two plastic wing nuts holding it in place. **A** **B**

2. On the drivers side locate the vehicles taillight wiring harness. **C** The harness will have connectors similar to those on the T-connector. Separate the connectors being sure not to damage the locking tabs. Insert the T-connector end with the yellow wire in-between the separate connectors. Make sure the connectors are fully inserted with locking tabs in place.

3. Route the T-connector end with the green wire to the passenger side behind the removed scuff panel. Repeat step 2 on the passenger side using the green wire.


4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included. Route the black wire through any rubber grommet in the trunk area if applicable to the black converter.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

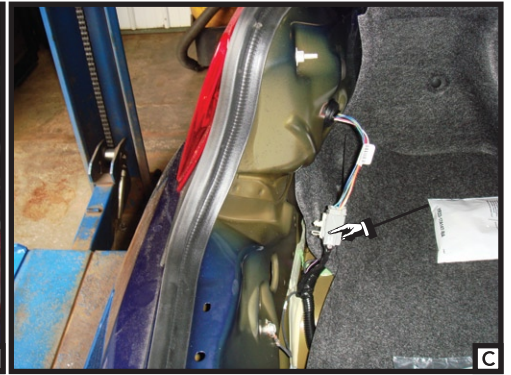



56088