

56091



SUBARU LEGACY

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

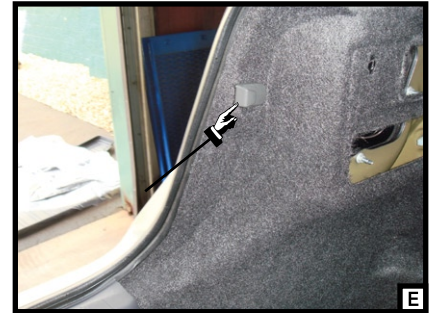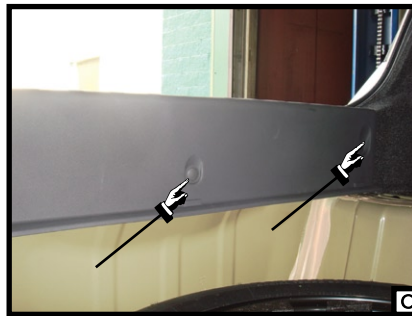

1. Open the trunk. Remove the spare tire compartment cover and jack storage tray. **[A]** **[B]** Remove the rear scuff panel by removing the plastic fasteners holding it in place and pulling up. **[C]** **[D]** On both sides remove the cargo loops holding the felt trunk liner in place. **[E]** Pull back on the trunk liner to locate the vehicles taillight wiring harness. **[F]** The harness connectors will be similar to those on the T-connector harness.
2. On the drivers side separate the vehicles connectors being sure not to damage the locking tabs. Insert the T-connector end with the yellow wire in-between the separated connectors. Make sure the connectors are fully inserted locking tabs in place.
3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
4. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.
5. Route the T-connector end with the green wire to the passenger side behind the removed scuff panel. Repeat step 2 on the passenger side using the green wire.
6. Reinstall anything removed during install.
7. Route the 4-flat wire to the center of the vehicle and out the trunk when in use. When not in use roll up and store in an out of the way location in the trunk.

WARNING!
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



56091