

# 56096

CADILLAC SRX

## WIRING LOCATION GUIDE



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



1. Remove the bumper fascia panel by removing the two phillips head screws holding it in place. [A] Behind fascia panel and above the bumper beam locate the vehicles OEM trailer wiring harness connector. The connector will mate with connector on the harness. [B]

2. Remove white plastic plug from the connector. Be sure not to damage the locking tabs. [B] Insert the harness connector into the vehicles connector. [C] Make sure the connectors are fully inserted with locking tabs in place.

3. Secure the 4-flat to the center of the vehicle with the cable ties provided. [D]

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

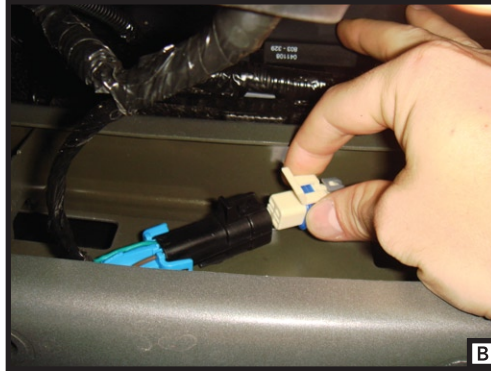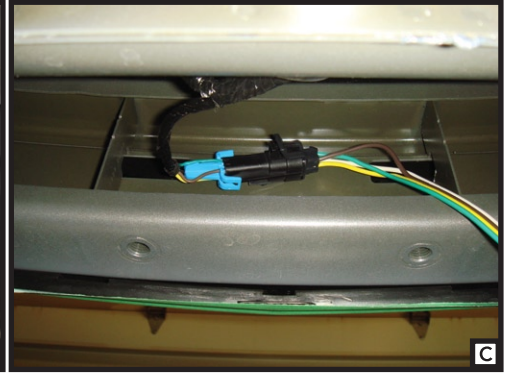



56096