

56138

FORD FOCUS SEDAN

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

1. Open the trunk and remove the floor covering (A). Remove the foam cargo trays surrounding the spare tire (B). Remove the rear scuff panel by removing two plastic fasteners (C) and pulling up (D). On both sides of the trunk remove a plastic fastener holding the plastic trim panel in place (E). On both sides of the trunk remove the plastic fastener holding the felt trunk liner in place (F). Pull back on the felt trunk liner to reveal the vehicle's taillight wiring harness connectors (G). The connectors will be similar to those on the T-Connector harness.

2. On the driver's side separate the connector taking not to damage the locking tabs (H). Take care not to damage the locking tabs. Insert the T-Connector end with the yellow wire between the separated connectors (I). Make sure the connectors are fully inserted with locking tabs in place.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white ground wire using ring terminal and screw provided.

4. Adhere the black converter box to the body panel inside the trunk behind the vehicle's felt trunk liner using the double-sided tape provided.

5. Review instruction sheet CME-PCL-INS and route the black power wire from the battery to the converter as shown.




6. Route the T-Connector end with the green wire out from behind the felt trunk liner across to the passenger side behind the removed rear scuff panel. Repeat Step 2 on the passenger rear side using the T-Connector end with the green wire.


7. Route the 4-flat wire out from behind the felt trunk liner to the center of the vehicle.

8. Secure any loose wires with the cable ties provided.

9. Reinstall all items removed during install.

10. When in use, route the 4-flat out of the trunk. When not in use, roll up and store in a convenient out of the way location in the trunk.

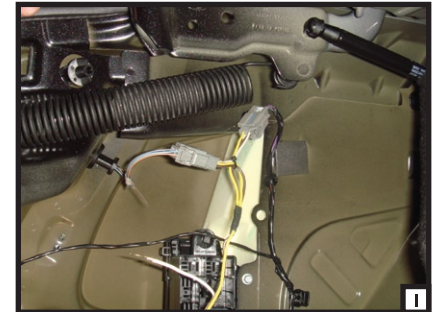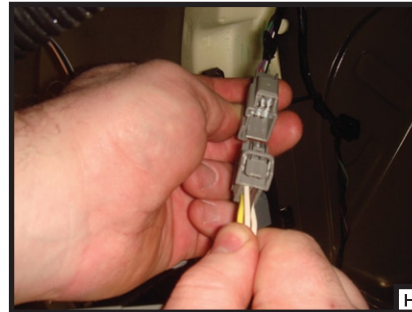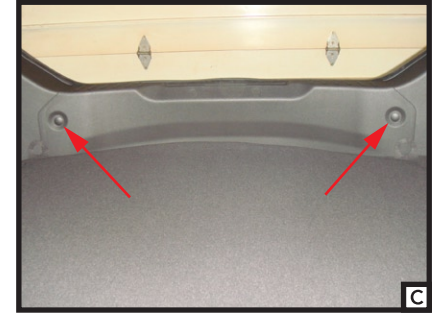

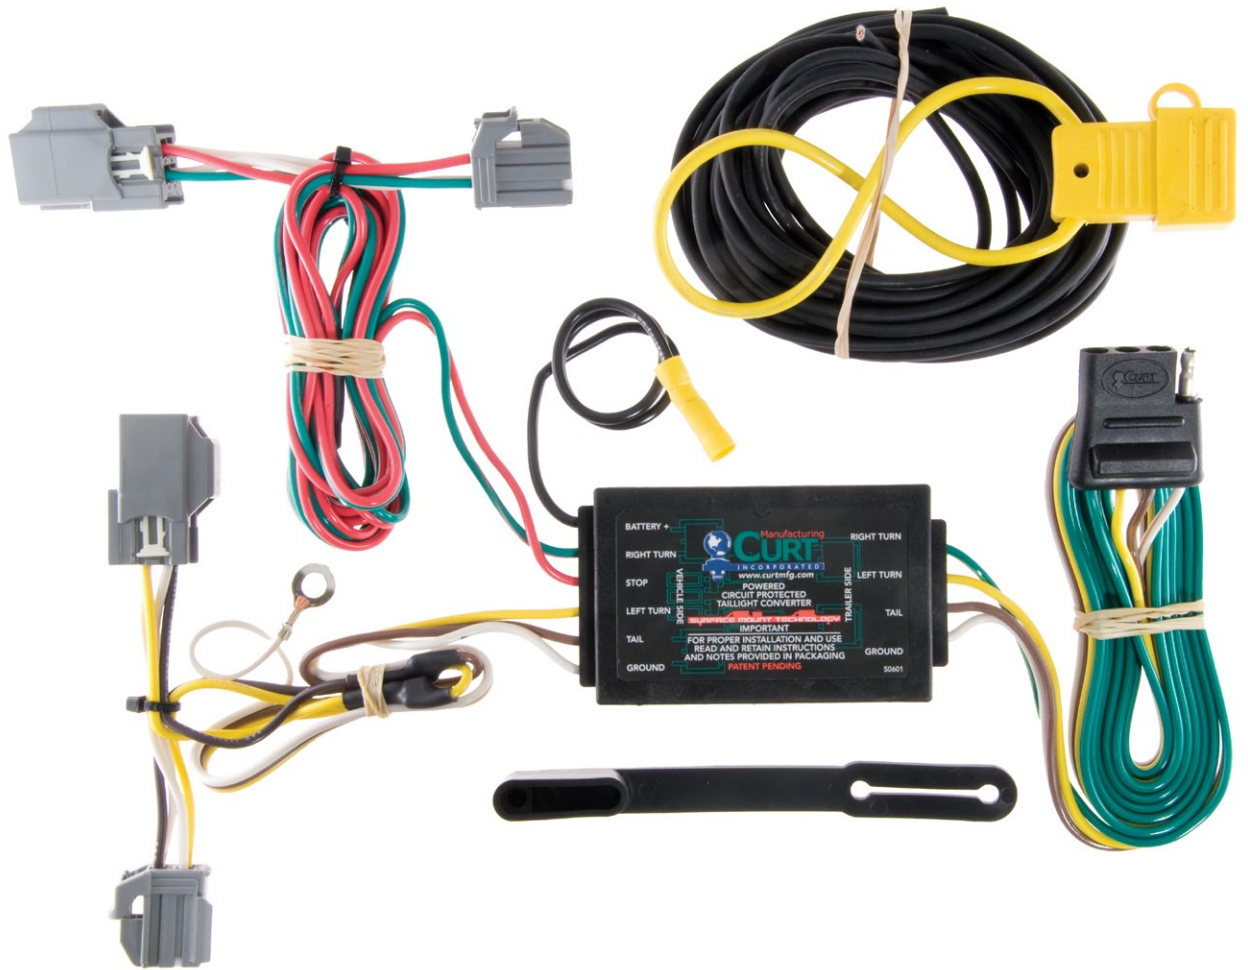

Looking for dependable trailer hitches and towing? Rely on CURT for quality and long-lasting products.