

56159

LAND ROVER EVOQUE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!


All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

English

1. Locate the vehicle's 8-pin trailer wiring connector behind the bumper. The connector will be similar to the connector on the 4-flat harness (A). Remove the cover and insert the trailer wiring harness connector into the vehicles connector. Make sure the connectors are fully inserted with locking tabs in place.
2. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
3. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

WARNING!
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



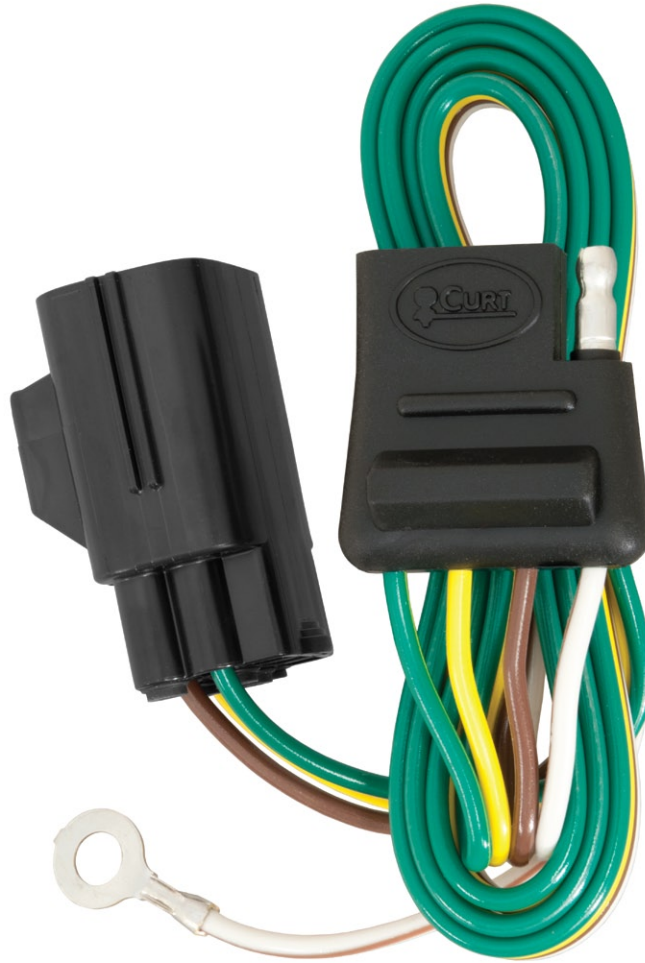

Looking for dependable trailer hitches and towing? Rely on CURT for quality and long-lasting products.