

# 56673


FORD FREESTAR  
MERCURY MONTEREY

## WIRING LOCATION GUIDE



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

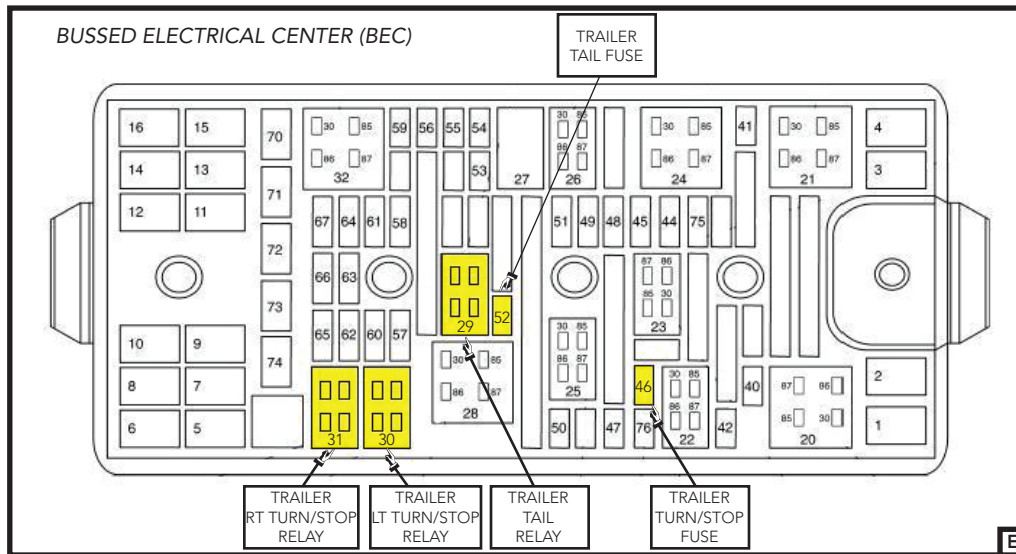

1. Locate the vehicles taillight wiring harness behind the rear bumper(S6). [A]

2. Remove the protective dust cover from the factory harness connector. The connector will be similar in appearance to that on the T-connector harness. Clean away any dirt, dust or debris from the connector. [B]

3. Insert the T-connector harness end into the factory harness connector. Firmly press the ends together until the locking tabs engage. [C]

4. Secure the T-connector wires to the vehicle using cable ties. [D]

5. At the front of the vehicle, locate the main fuse center on the drivers side of the engine compartment. [E]

6. Carefully remove the fuse panel cover and insert (3) relays into 29,30, and 31. Insert (2) 20 amp mini fuses into positions 46 & 52. Refer to the label on the inside of the fuse panel cover for position locations. [E]

7. Replace and secure the fuse panel cover into its original position.

**WARNING!**  
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.



56673

