





## - Installation Manual -

380 240 A  
POWERBRACE  
[Floor Subframe Brace](#)

[ Part Number ]	380 240 A
[ Application ]	HONDA S2000 (AP1 & AP2)
[ Product ]	POWERBRACE
[ Description ]	Floor Subframe Brace
[ Contents ]	Bar (Right Side) x1 Bar (Left Side) x1 Bar (Center) x1 M10 Button Bolt x2 M10 Washer x2 M10 Nylon Nut x2

[Procedure]

- 1.) Assemble left and right bars as shown in the photo against the chassis underbody, hand tighten each end.
- 2.) Secure center bar with included bolts, washers, and nuts. (The bar is labeled left or right)
- 3.) Torque all hardware according to factory service manual specifications.

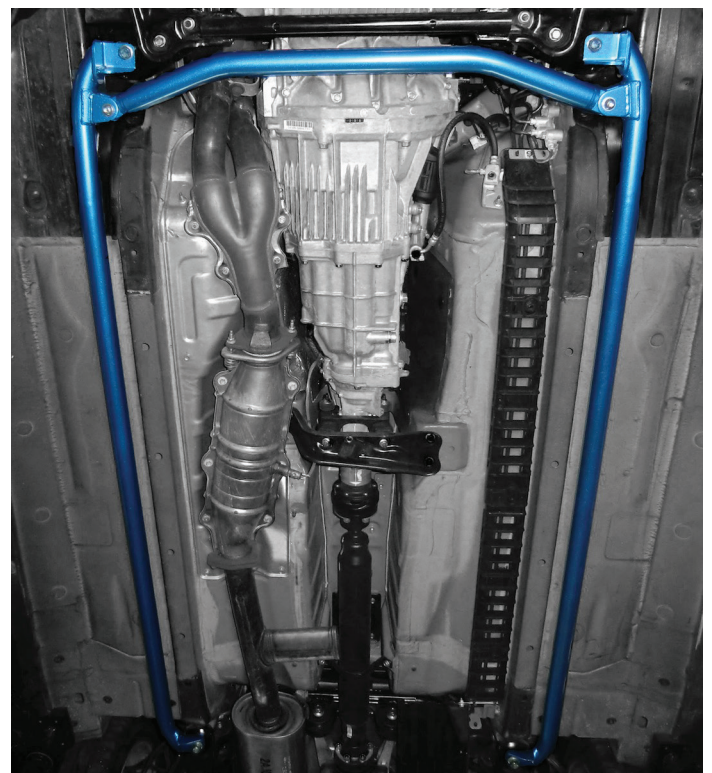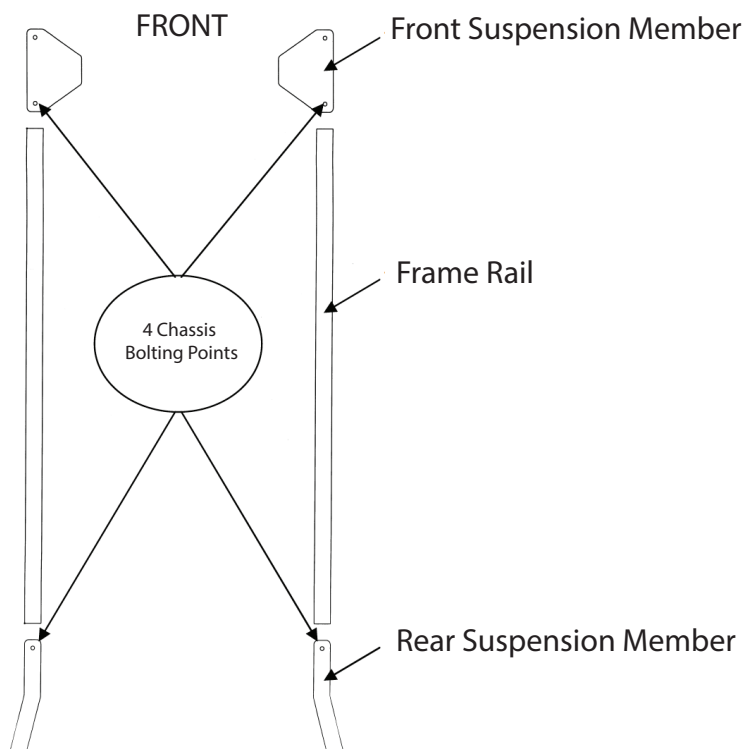

Vehicle Undercarriage

\*\*Periodically check and re-torque all nuts and bolts after operating vehicle.