



# - Installation Manual -


380 477 A

[Lower Arm Bar Version 2](#)

[ Part Number ]	380 477 A	
[ Application ]	HONDA S2000 (AP1 & AP2)	
[ Product ]	Lower Arm Bar Version 2	
[ Description ]	Front Lower Arm Brace Version 2	
[ Contents ]	M8 x 25 (6 Sided Bolt)	x1
	M8 Washer	x1
	M8 Spring Washer	x1

[Procedure]

Place Cusco Lower Arm Bar as pictured below and hand-tighten the included bolt and washers. Reuse the 4 factory nuts, hand tighten. Torque down all hardware according to factory service manual specifications.

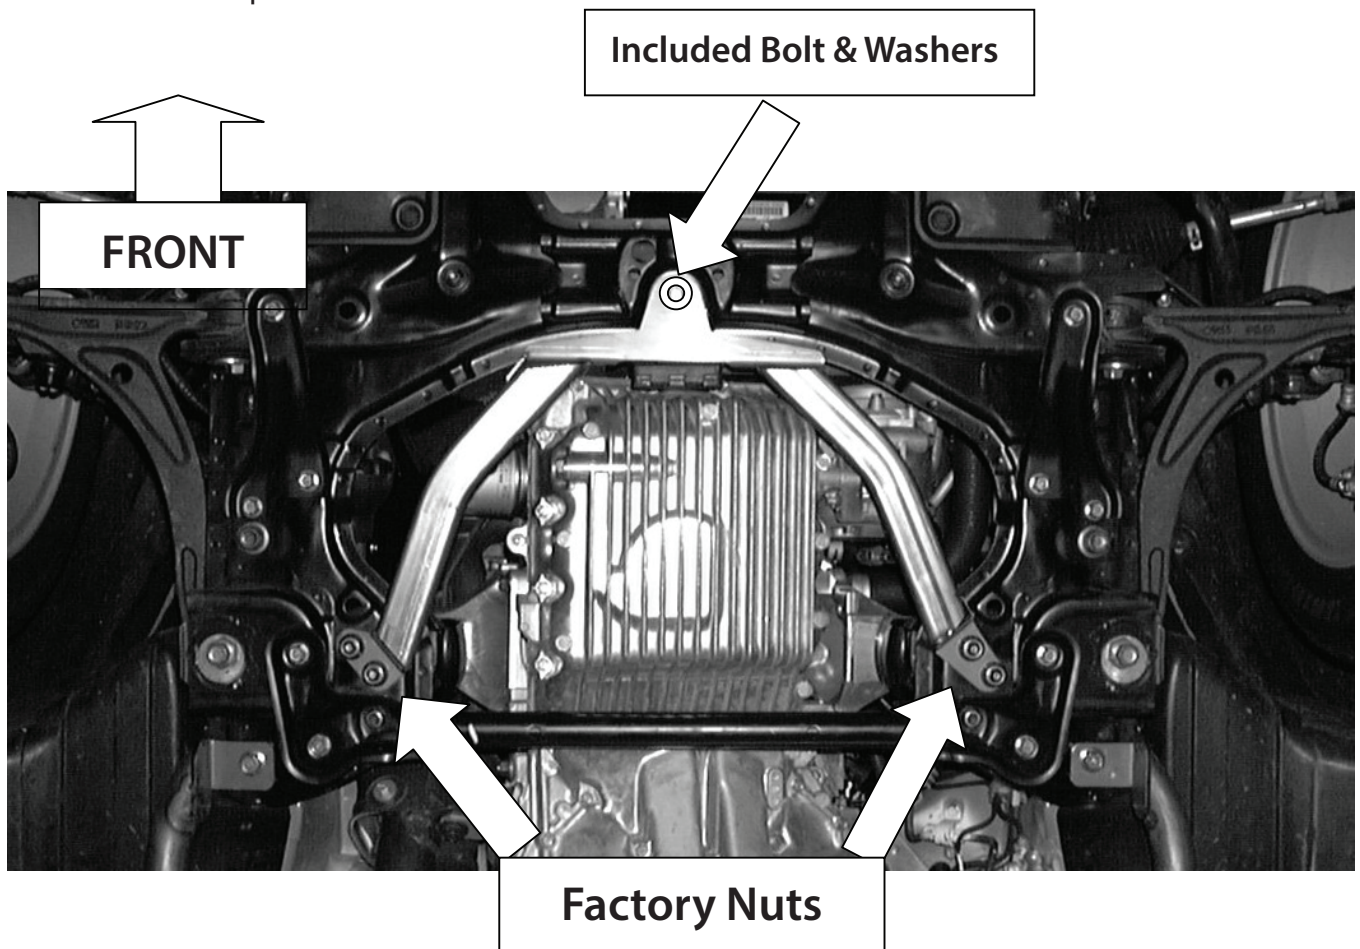

\*\*Periodically check and re-torque all nuts and bolts after operating vehicle.