




- Installation Manual -

673 487 A

[Rear Subframe Brace](#)


[Part Number]	673 487 A
[Application]	Subaru Impreza GC8 (applied D~) Subaru Impreza GDB Subaru Impreza Wagon GGA & GGB
[Product]	Rear Subframe Brace
[Description]	Rear lower bar for subframe brace *Used with 672 487 S (Diffuser Bracket) as an option
[Contents]	Rear Lower Subframe Brace x1
[Procedure]	

Fig.1

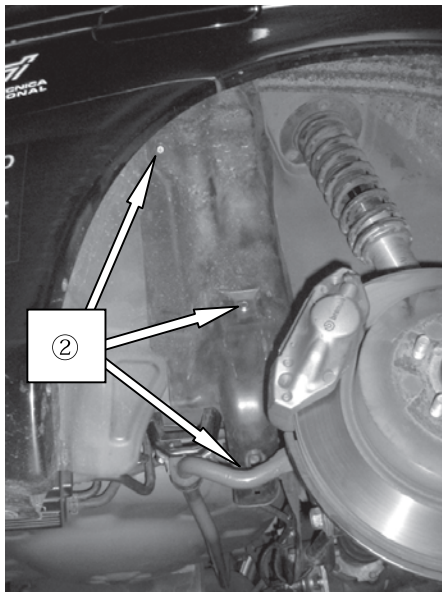


- 1.) Remove the passenger side wheel.
- 2.) Remove the three nuts and bolts to take off the oil line cover. Fig.1

Fig.2.

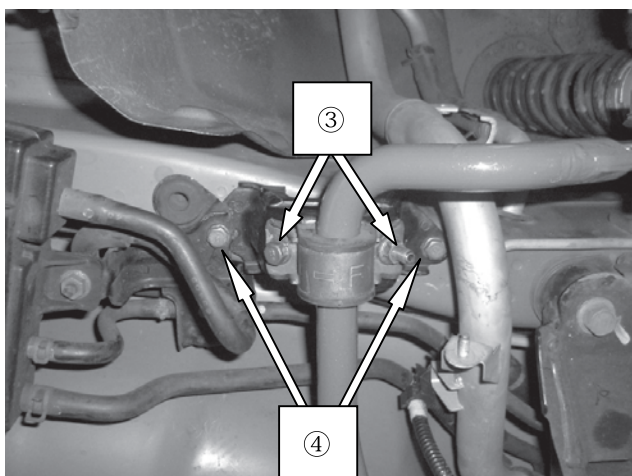

- 3.) Remove the sway bar bracket nut and bolt on both sides. Lower the sway bar.
- 4.) Unbolt the sway bar body bracket by removing the two bolts.
(Repeat all these steps for the other end of the vehicle)

Fig 3.

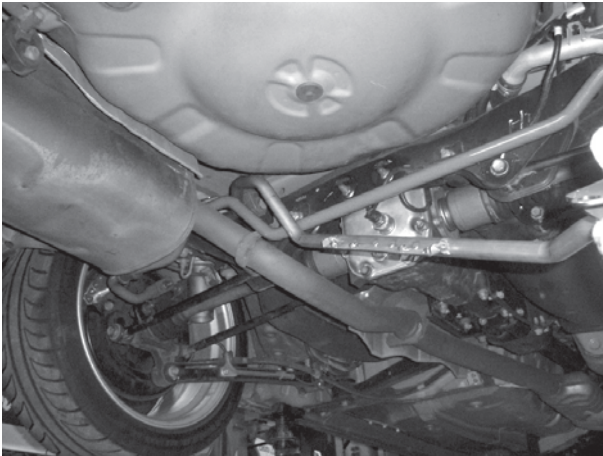

5.) Position the Subframe Brace between the chassis and exhaust, above the sway bar.

6.) Reinstall the bracket that was removed in step 4 on top of the Subframe Brace ends.

Fig 4. (Right Side)



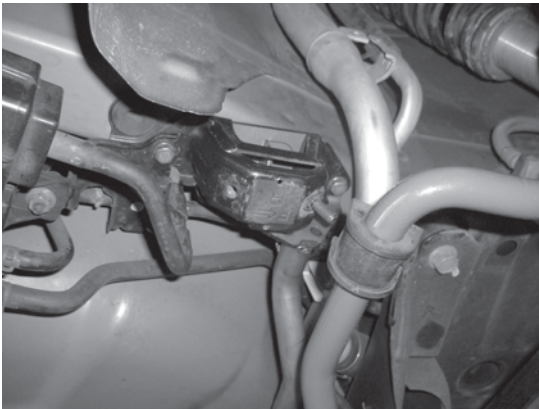


Fig 5. (Left Side)

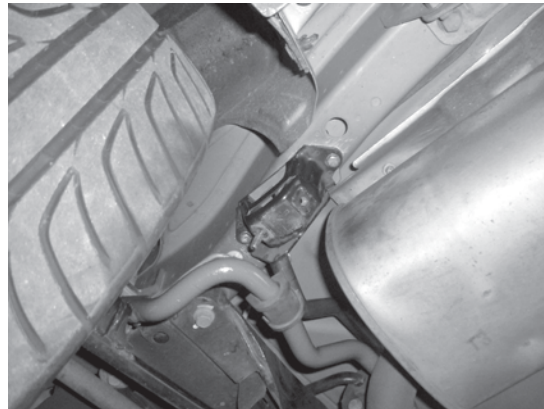

7.) Put back the sway bar in the reverse order it was taken off.

Fig 6.

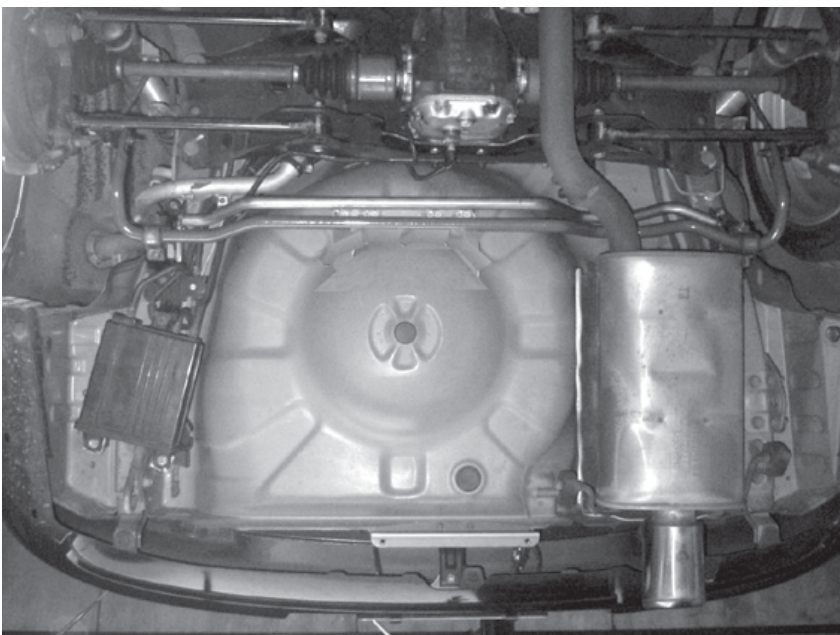

******Periodically check and retighten any nuts and bolts that were involved with this installation after operating the vehicle.